



INTEGRATION KIT

QUICK START

MANUAL



**INTEGRATION KIT QUICK
START MANUAL
Version 1.3**

© Copyright EZTech Ltd. 2005
all rights reserved
www.eztech.ind.br



INTEGRATION KIT QUICK START MANUAL Version 1.3

© Copyright EZTech Ltd. 2005
all rights reserved
www.eztech.ind.br

Summary

Unboxing	4
Connecting Card Reader	5
Connecting Communication Cable with Pump	5
Connecting the EZRemote with EZForecourt Plus	6
Connecting RS485 to USB on your computer	6
Download the installation package	7
Installing and configuring the EZTech package	8
EZIPConfig	8
EZForecourt and Computer Network Physical Connection	9
Changing Parameter RS485Echo	10
EZSim	10
EZMonitor	11
Connecting Cable to Simulate Tank	11
Connecting Network Cable with DB9 Female Connector to RJ45 Female Converter	12
Connecting RS232 to DB9 Converter	12
Connecting RS232 Converter to Computer	13
Download the pendrive	13
Tank Simulator Installation	14
Tanks Simulator	14
Tank Visualization on Monitor	15

UNBOXING INTEGRATION KIT



Unboxing

You will receive the Integration Kit:

1. EZForecourt Plus.
2. EZRemote.
3. 2x Card Readers.
4. Mifare Cards.
5. RS485 to USB Converter.
6. Communication Cable.
7. RS232 to USB Converter.
8. 2x Network Cables.
9. 2x Power Supplies 12Vdc.
10. DB9 Female Connector to RJ45 Female Converter.

Unboxing


Upon receiving the kit, check that the 5 and 6 component connections are secure before proceeding with the process.

1: Connecting the card readers.




Connecting Card Reader

2: Connect the RS485 to USB Converter in EZRemote [Pump RS485] port.

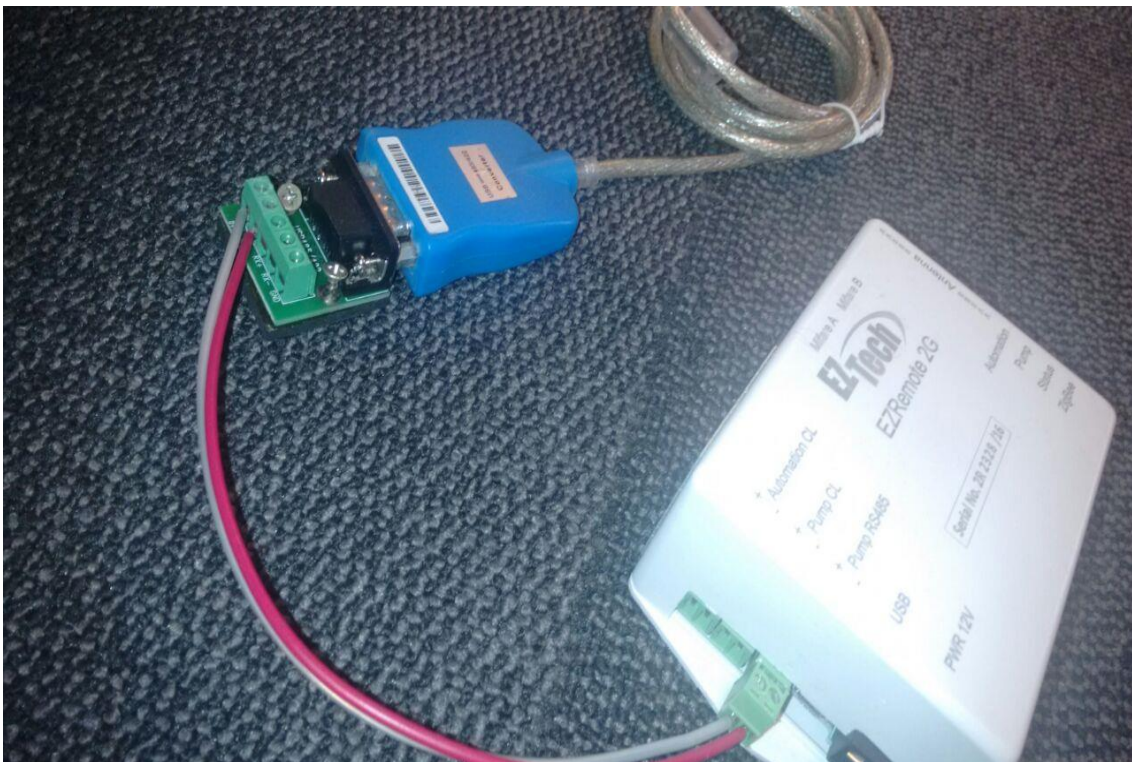


Connecting Communication Cable with Pump

3: Connect the EZRemote with EZForecourt Plus, using the communication cable on the EZRemote [Automation CL] port and EZForecourt Plus [Slot 1].

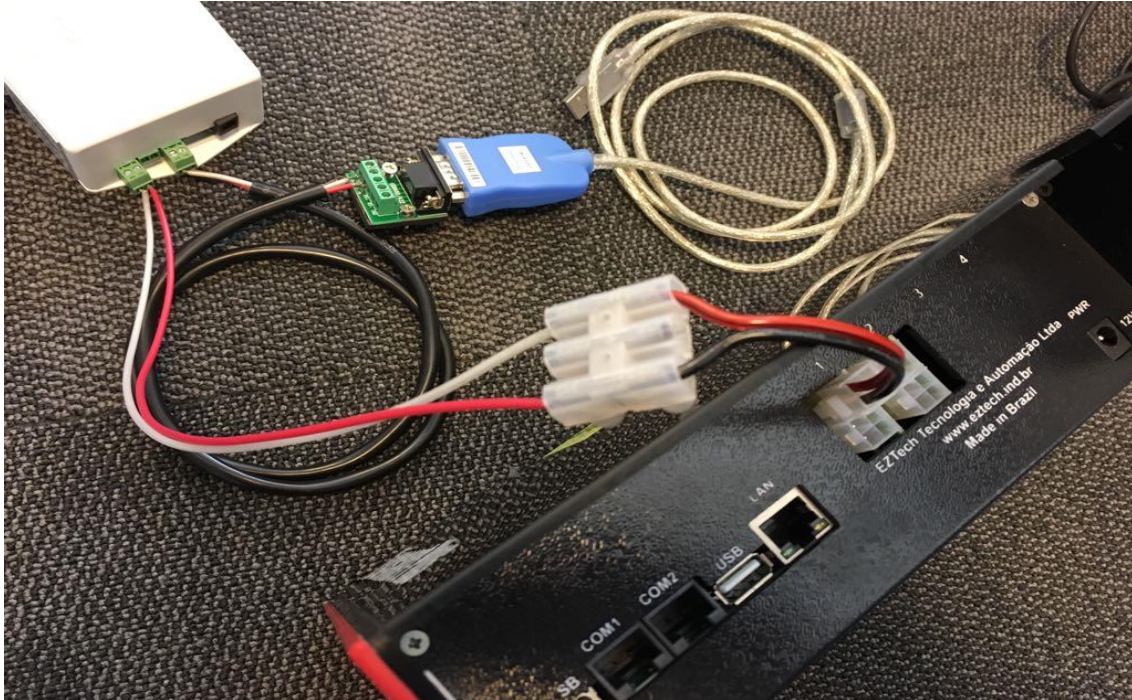


Connecting the EZRemote with EZForecourt Plus

4: Connect the RS485 to USB Converter cable to the computer. Connect the power supplies EZForecourt Plus and EZRemote

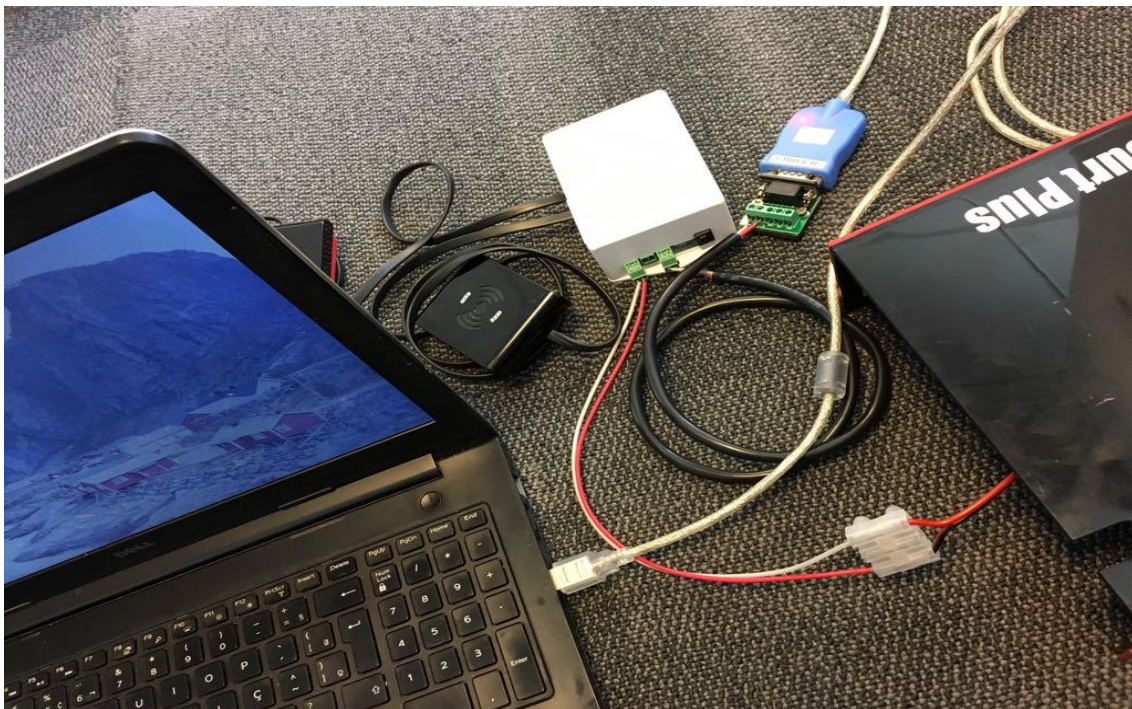


Connecting RS485 to USB on your computer

Check the Device Manager for the COM created by your computer, it must be configured when opening EZSim [C: \ EZForecourt \ EZSim].

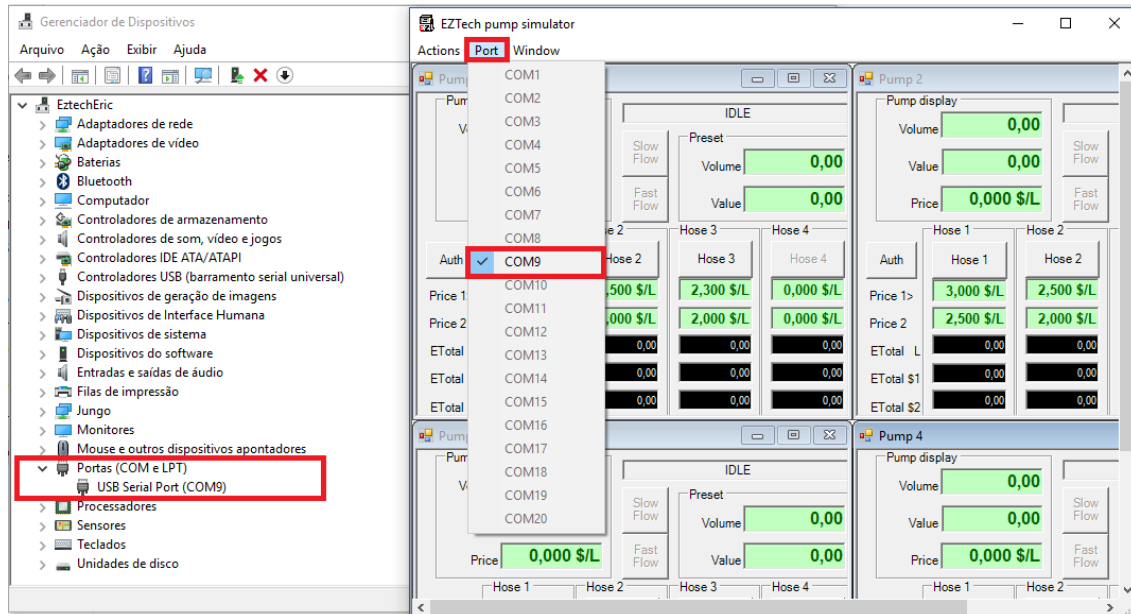


5: Download the installation package. Link: <http://eztech.ind.br/integracao-e-suporte.php>

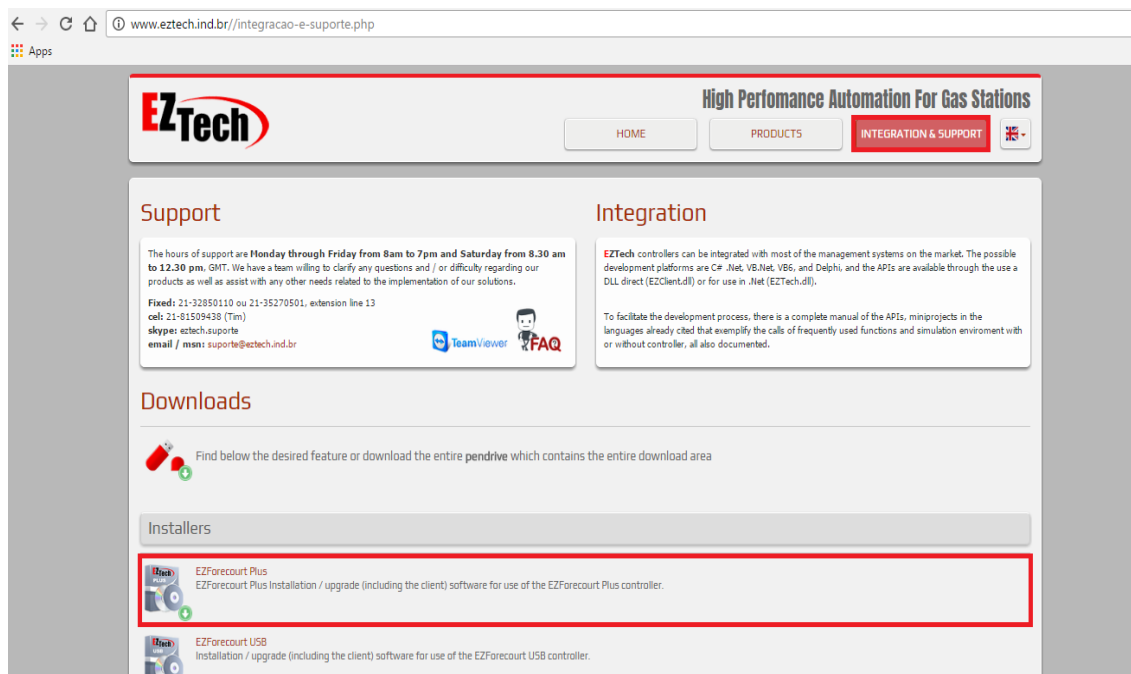


Download the installation package

6: Install the EZForecourt Plus package that can be downloaded from the EZTech. **Choose the full installation option.**

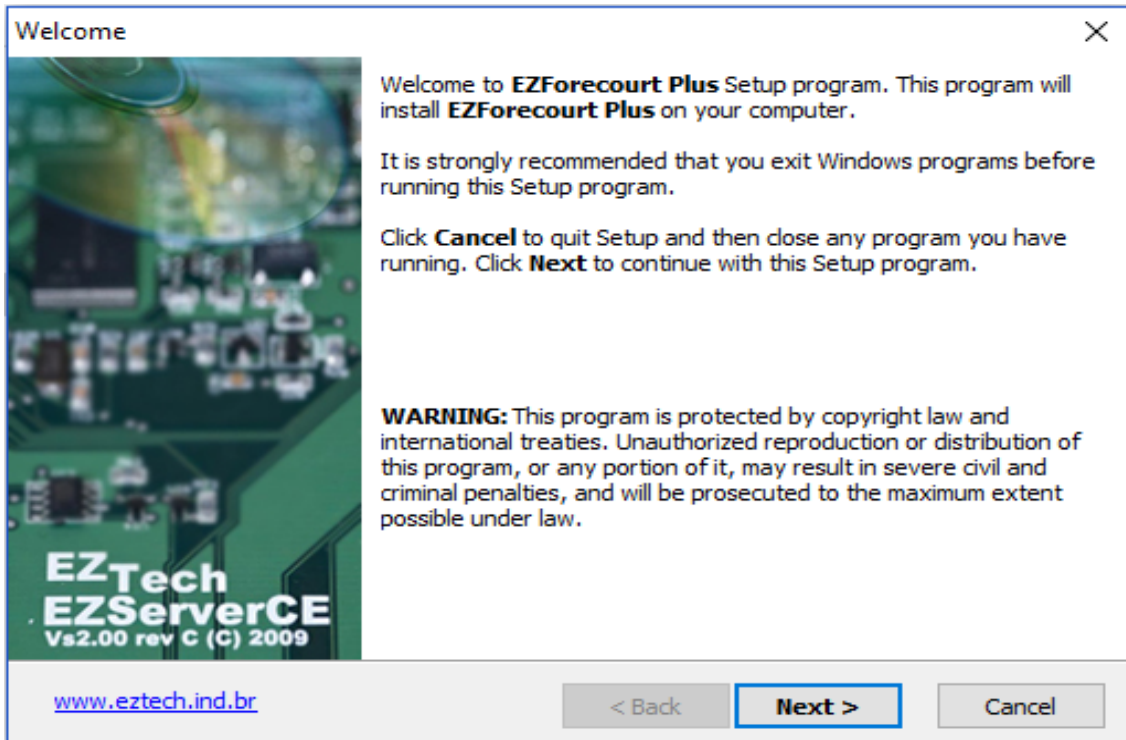


Installing and configuring the EZTech package

7: When the installation is finished, the EZIPConfig application will open automatically. If it does not open, it can be run in EZIPConfig.exe [C: \ EZForecourt]. Configure the IP of EZTech applications according to the image.

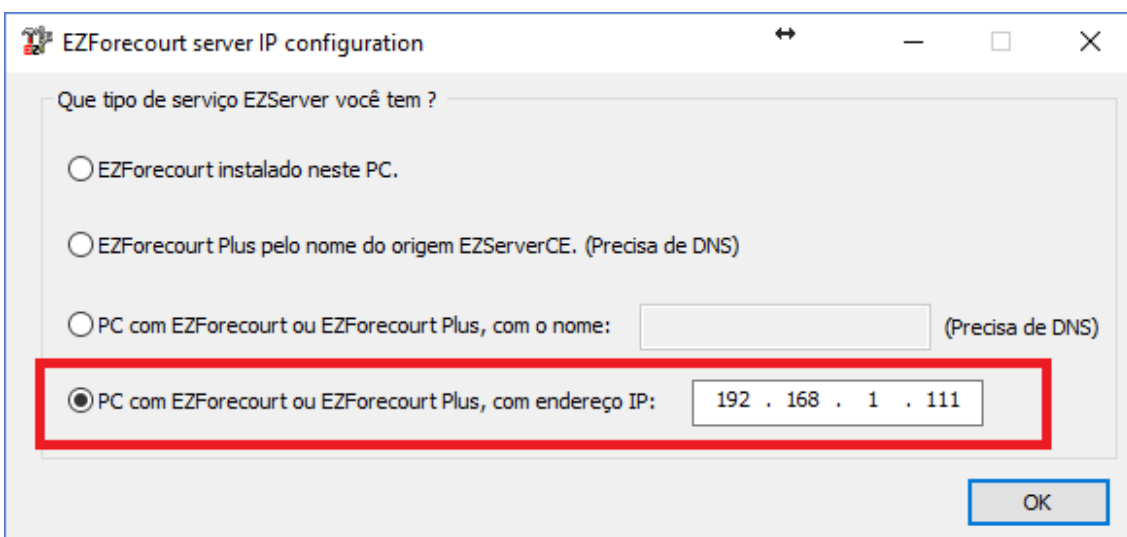

EZIPConfig

8: After installing, make sure EZForecourt Plus is communicating with the computer. Connect the network cable to the LAN port of EZForecourt Plus and the computer.

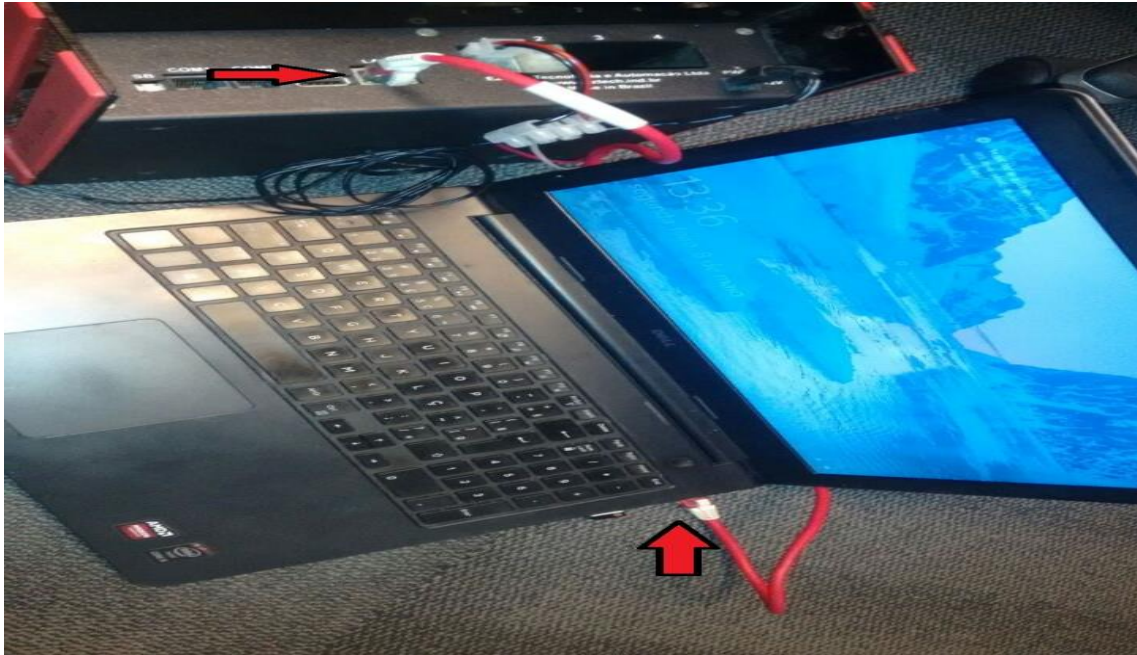


EZForecourt and Computer Network Physical Connection

By default, the IP configured in EZForecourt Plus is 192.168.1.111.

The IP range configured on the computer or router must match that of EZForecourt Plus.

If EZForecourt Plus is connected to a computer, you can check the IP range of the computer in [Control Panel \ Network and Internet \ Network Connections].

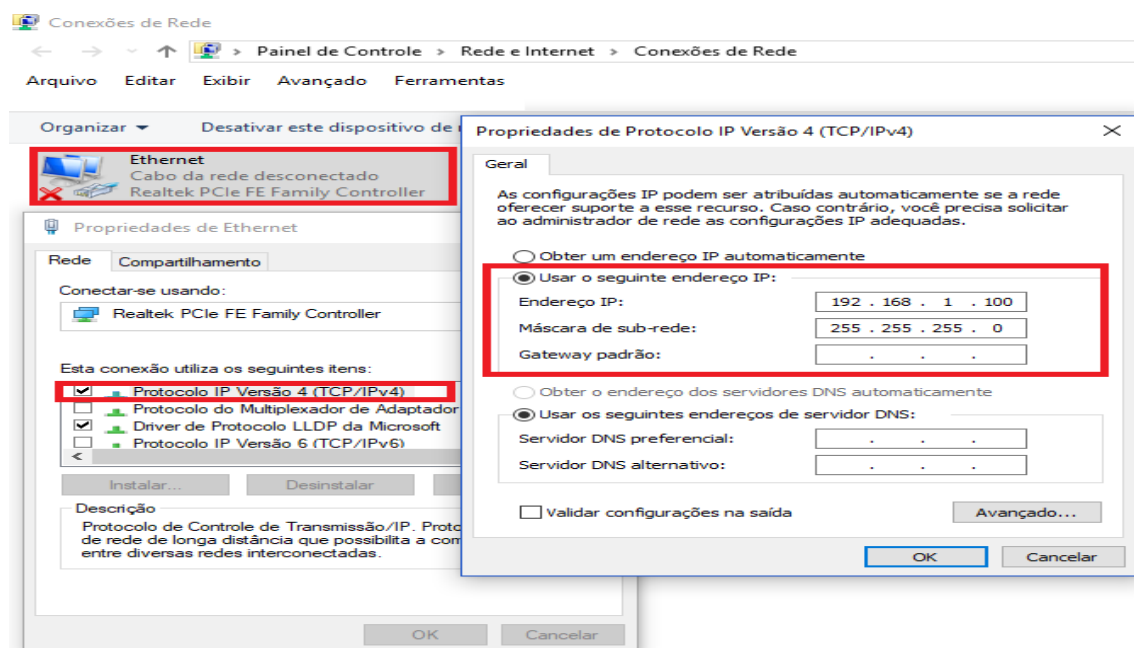

Configuring Network Connections

9: After installing the EZTech package, access the EZSim.INI file in the [C: \ EZForecourt \ EZSim] directory and change the **RS485Echo** parameter *from 1 to 0*.

```


EZSim.ini - Bloco de notas
Arquivo Editar Formatar Exibir Ajuda

[Application]
Name=EZSim pump simulator configuration
IniVersion=1.10

[Parameters]
NumberOfPumps=4
PriceDecimals=3
ValueDecimals=2
VolumeDecimals=2
CommPort=6
AutoFlow=1
SlowRate=0.015
FastRate=0.065
DelTimerInterval=250
PumpsPerRow=2
HorizontalSpace=0
VerticalSpace=0
AutoDelRate=10
FirstPump=1
RS485Echo=0
    
```

Changing Parameter RS485Echo

10: Run EZSim in the [C: \ EZForecourt \ EZSim] directory and you are ready to simulate your deliveries. Click the Hose X button, pass the client card or the attendant card and start the deliveries.

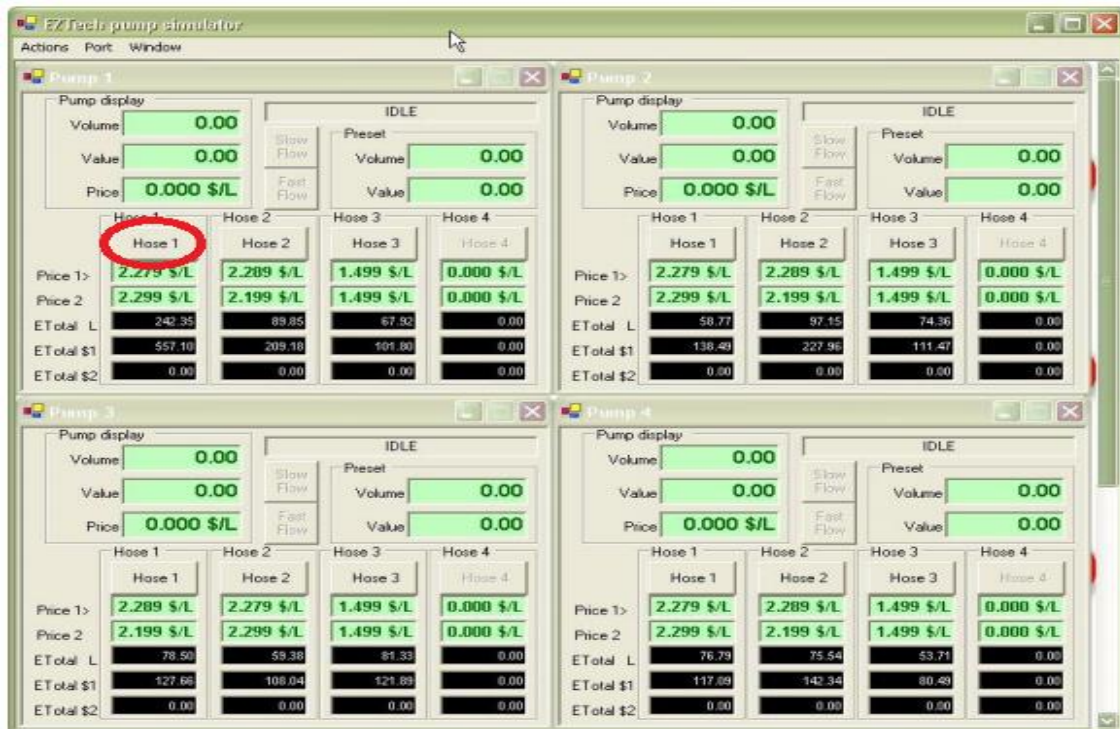

EZSim


11: Run the EZMonitor application within the [C:\ EZForecourt \ EZMonitor] directory to track your deliveries.

The screenshot shows the EZMonitor application window. At the top, there are two digital displays for fuel prices: 01 (3.84, R\$ 7.69, 2,000/L) and 02 (2.72, R\$ 5.45, 2,000/L). Below these are navigation buttons for 'Encerrantes', 'Abastecimentos', 'Log', 'Tanques', and 'ZigBee'. A menu bar contains various filters like 'Todas as Bomi', 'Todos os Bic', etc. The main area is a table titled 'Abastecimentos' with columns for ID do abast., Pos. Abast., Bico, Combustível, Preço, Volume, Valor, Cliente, No de Cartão, Tomado por, Tipo de abast., Data, Hora, Frentista, and No de Cartão. The table contains 11 rows of data, with the last row (ID 101) highlighted in blue. At the bottom, there are summary fields for 'Qtde. 101' (1.110,400L) and 'R\$ 2.129,30', along with a 'Save' button.

ID do abast.	Pos. Abast.	Bico	Combustível	Preço	Volume	Valor	Cliente	No de Cartão	Tomado por	Tipo de abast.	Data	Hora	Frentista	No de Cartão
90	* PA 1	1	Gasolina	R\$ 2,000	16,480	R\$ 32,97	Sem cliente		Pendente	Pós-pago	07/03/2017	15:08	Sem frentista	
91	* PA 1	1	Gasolina	R\$ 2,000	17,760	R\$ 35,53	Sem cliente		Pendente	Pós-pago	07/03/2017	15:09	Sem frentista	
92	* PA 1	1	Gasolina	R\$ 2,000	7,040	R\$ 14,09	Sem cliente		Pendente	Pós-pago	07/03/2017	15:10	Sem frentista	
93	* PA 1	1	Gasolina	R\$ 2,000	10,080	R\$ 20,17	Sem cliente		Pendente	Pós-pago	07/03/2017	15:11	Sem frentista	
94	* PA 1	1	Gasolina	R\$ 2,000	6,240	R\$ 12,49	Sem cliente		Pendente	Pós-pago	07/03/2017	15:11	Sem frentista	
95	* PA 1	1	Gasolina	R\$ 2,000	18,720	R\$ 37,45	Sem cliente		Pendente	Pós-pago	07/03/2017	15:12	Sem frentista	
96	* PA 1	1	Gasolina	R\$ 2,000	3,200	R\$ 6,41	Sem cliente		Pendente	Pós-pago	07/03/2017	15:13	Sem frentista	
97	* PA 1	1	Gasolina	R\$ 2,000	5,920	R\$ 11,85	Sem cliente		Pendente	Pós-pago	12/03/2017	11:38	Sem frentista	
98	* PA 1	1	Gasolina	R\$ 2,000	8,000	R\$ 16,01	Sem cliente		Pendente	Pós-pago	12/03/2017	11:39	Sem frentista	
99	* PA 1	1	Gasolina	R\$ 2,000	18,240	R\$ 36,49	Sem cliente		Pendente	Pós-pago	12/03/2017	11:40	Sem frentista	
100	* PA 1	1	Gasolina	R\$ 2,000	11,200	R\$ 22,41	Sem cliente		Pendente	Pós-pago	12/03/2017	11:41	Sem frentista	
101	* PA 1	1	Gasolina	R\$ 2,000	6,400	R\$ 12,81	Sem cliente		Pendente	Pós-pago	12/03/2017	11:42	Sem frentista	

EZMonitor

12: Connect the network cable to **COM 2** port of EZForecourt Plus.

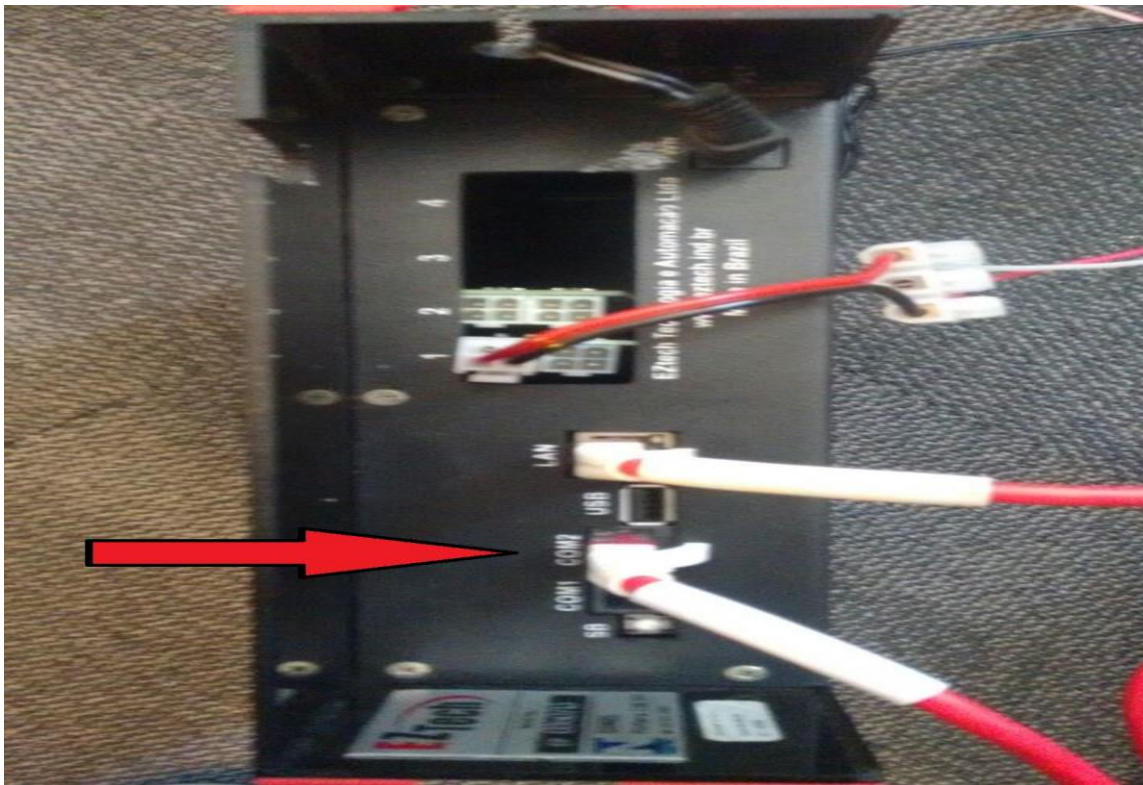


Connecting Cable to Simulate Tank

13: Connect the network cable with DB9 Female Connector to RJ45 Female Converter.



Connecting Network Cable with DB9 Female Connector to RJ45 Female Converter

14: Connect the RS232 to USB converter with to the female DB9 input.

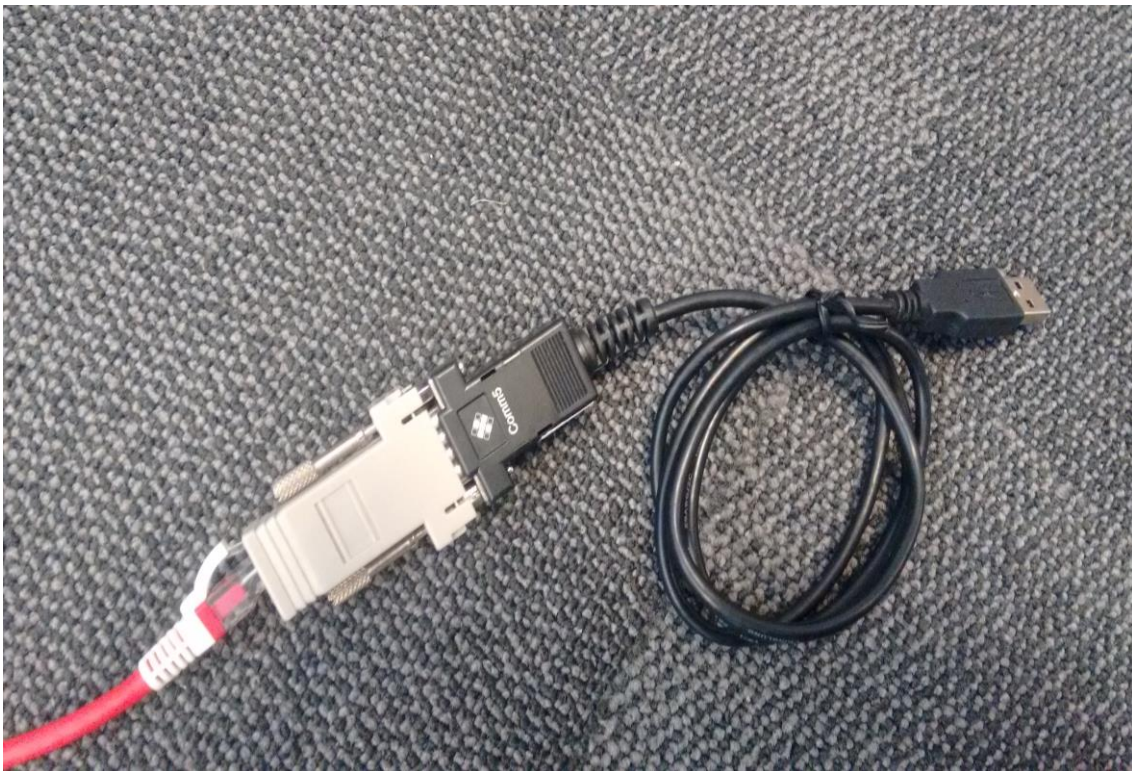


Connecting RS232 to DB9 Converter

15: Plug the cable into the USB port on your computer.




Connecting RS232 Converter to Computer

16: Download the pendrive. Link: <http://eztech.ind.br/integracao-e-suporte.php>.

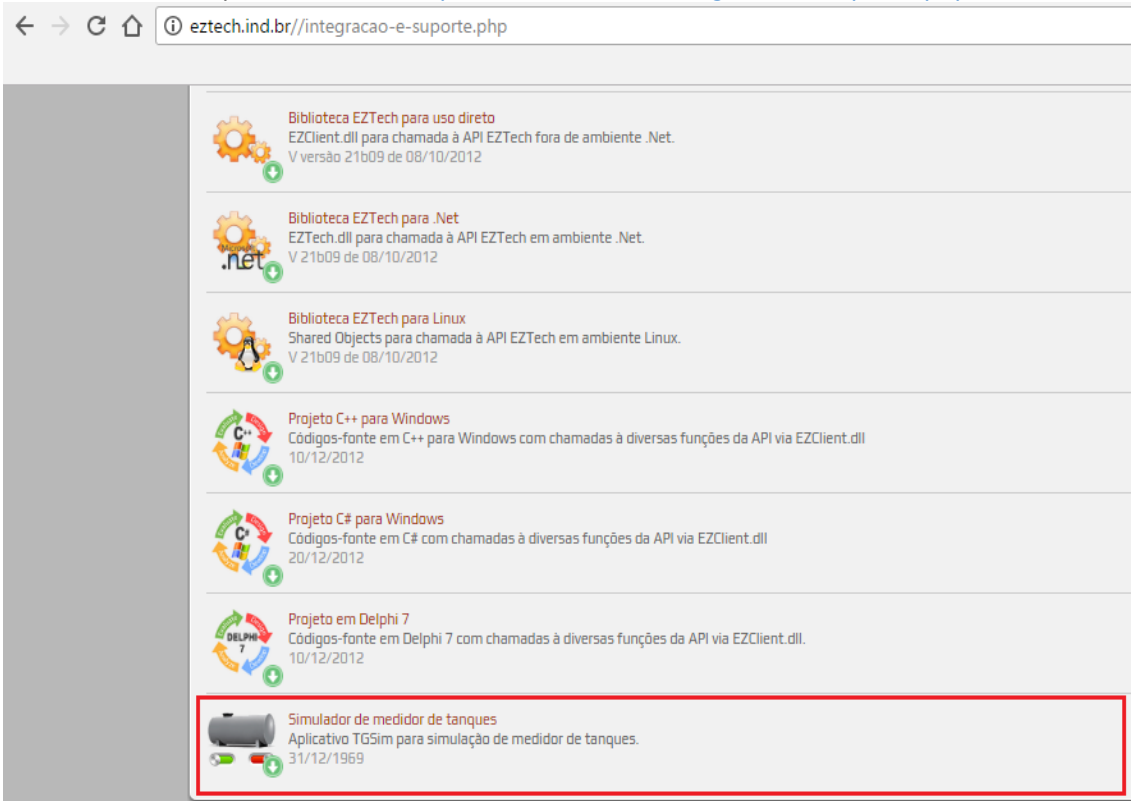


Download the pendrive

17: Install the Tank Simulator in [Pendrive\Simulador de Tanques].

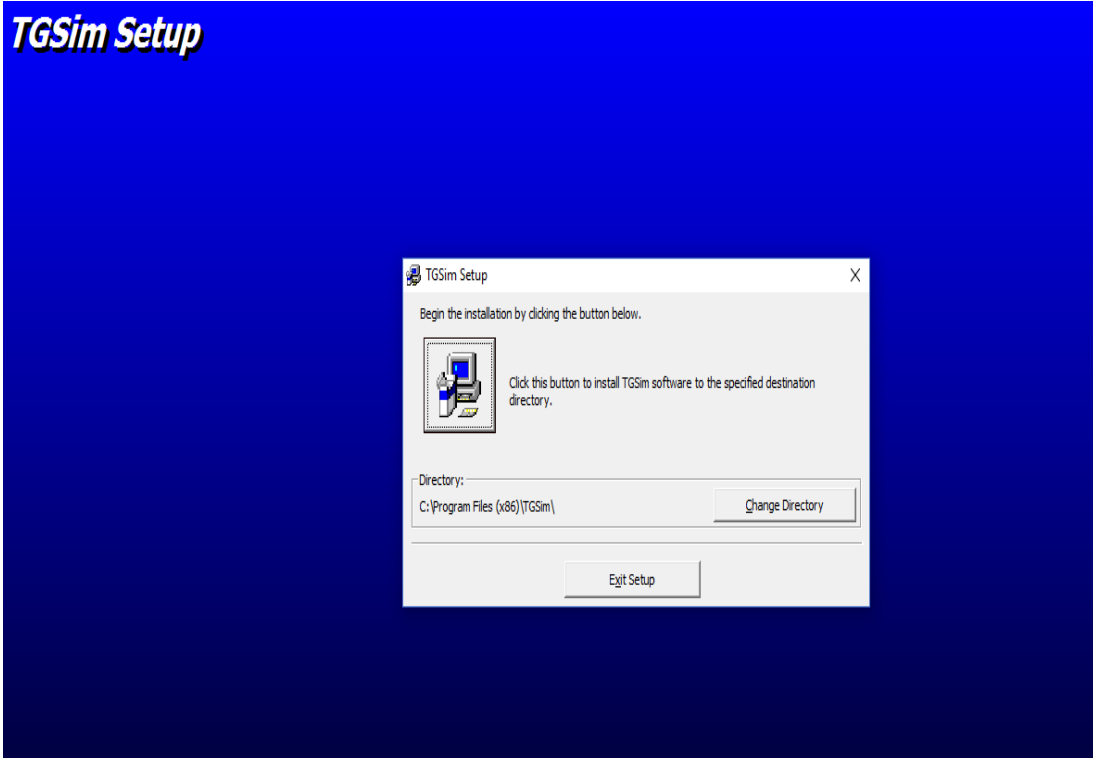


Tank Simulator Installation

18: Run the TGSim (Tank Simulator) in [C: \ Program Files \ TGSim] and select the COM created by your computer for the RS232 converter "This can be checked in Device Manager".

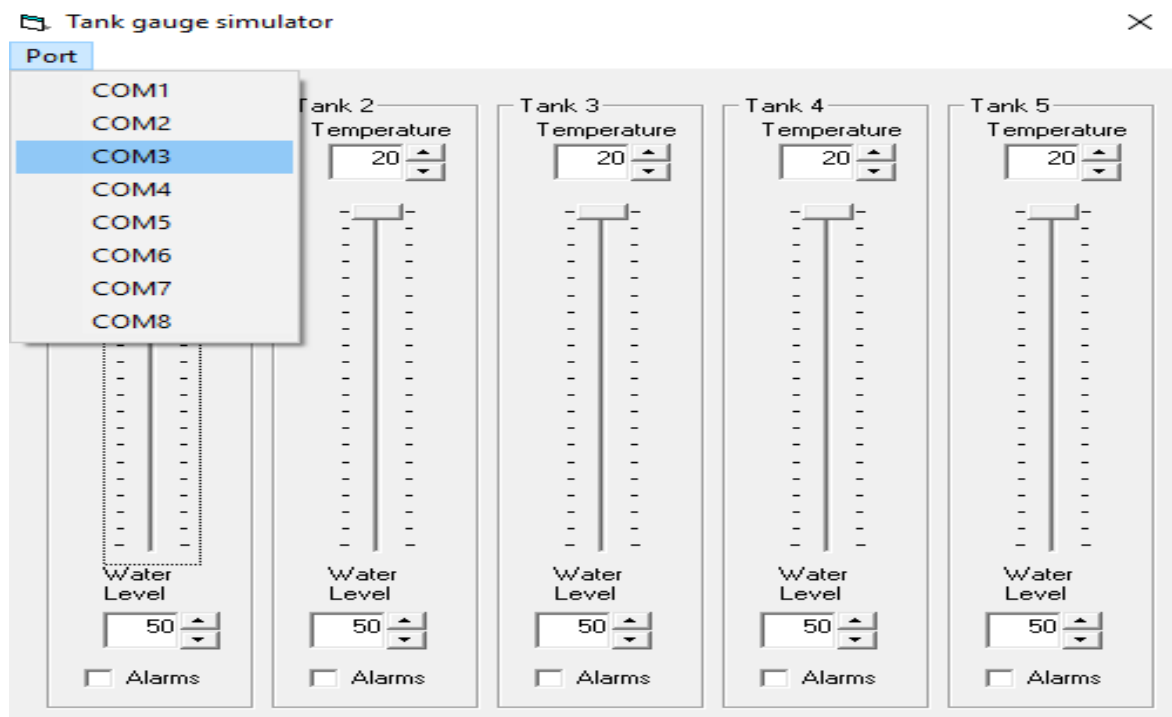

Tanks Simulator

19: On the Tanks tab in the EZMonitor application within the [C: \ EZForecourt \ EZMonitor] directory you can follow the tanks in real time.

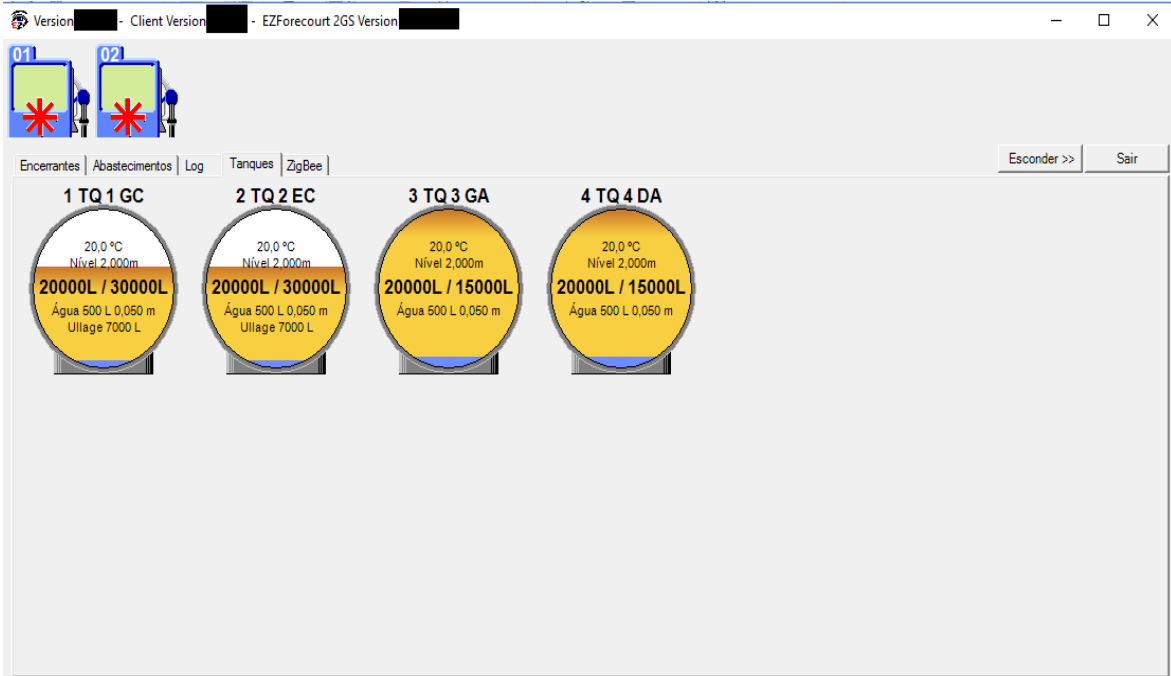

Tank Visualization on Monitor