

october 2023




noForth website

How to get noForth-T in the various Pico boards with RP2040 (All OSes)

What's needed?

- Any brand Pico board
- Micro-USB or USB-C cable

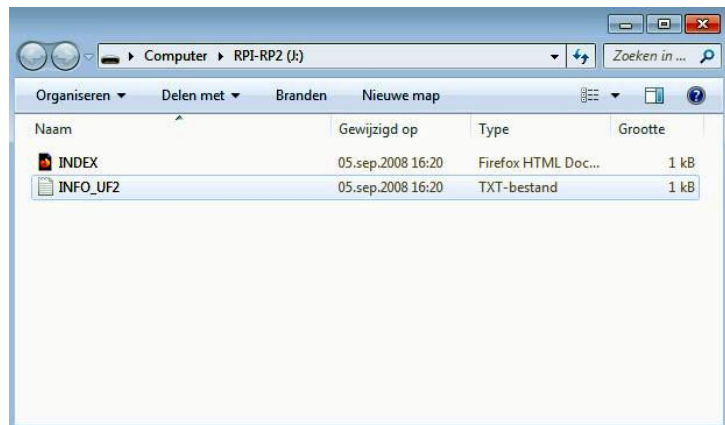

What to do?

1. Keep BOOT or BOOTSEL switch pressed and connect the board with the USB-C or Micro-USB cable
2. If a reset button is present, press the BOOT or BOOTSEL switch and press the reset switch (RST) at the same time. Of course after connecting the appropriate USB cable.
3. A window appears. **Drag a noForth-T UF2 file to the folder**
4. Connect your computer (using a terminal programme at 460k8 baud) via a USB-RS232 cable to GPIO0, GPIO1, Gnd & VSYS on the board. Press [enter]. If everything is OK you will see that noForth is already running.