







 








DIGITAL PIANO

SETUP GUIDE

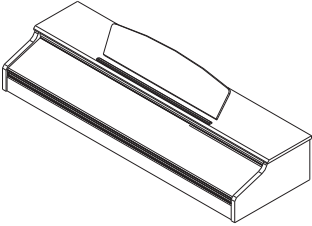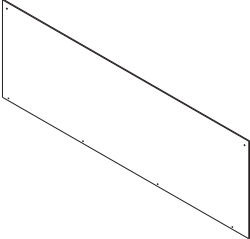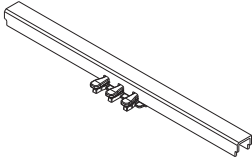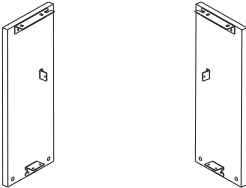


CONTENTS CHECKLIST

 
First, check the contents of the package and make sure you have everything you need.

<p>①</p>  <p>X1</p>	<p>②</p>  <p>X1</p>	<p>③</p>  <p>X1</p>			
<p>④</p>  <p>X2</p>	<p>⑤</p>  <p>X2</p>	<p>⑥</p>  <p>X1</p>			
<p>Ⓐ</p>  <p>X4</p>	<p>Ⓒ</p>  <p>X4</p>	<p>Ⓓ</p>  <p>X2</p>	<p>Ⓔ</p>  <p>X3</p>	<p>Ⓕ</p>  <p>X4</p>	<p>Ⓖ</p>  <p>X4</p>
<p>Ⓑ</p>  <p>X4</p>					

 
TOOLS REQUIRED




1

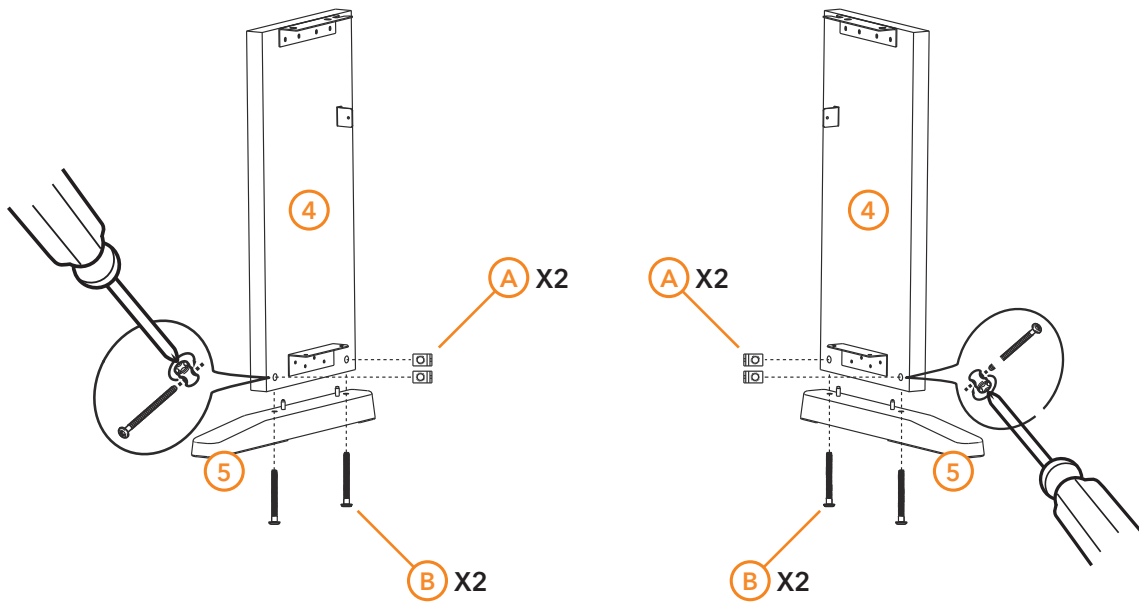


2

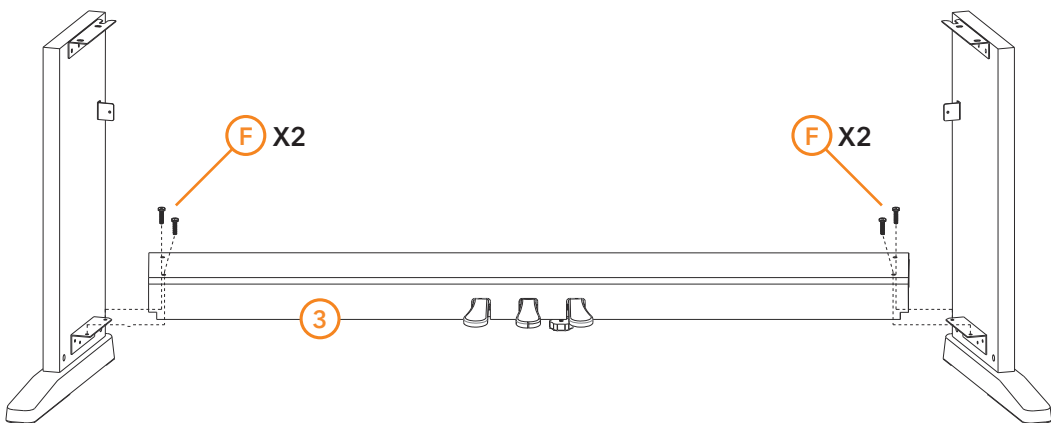


3

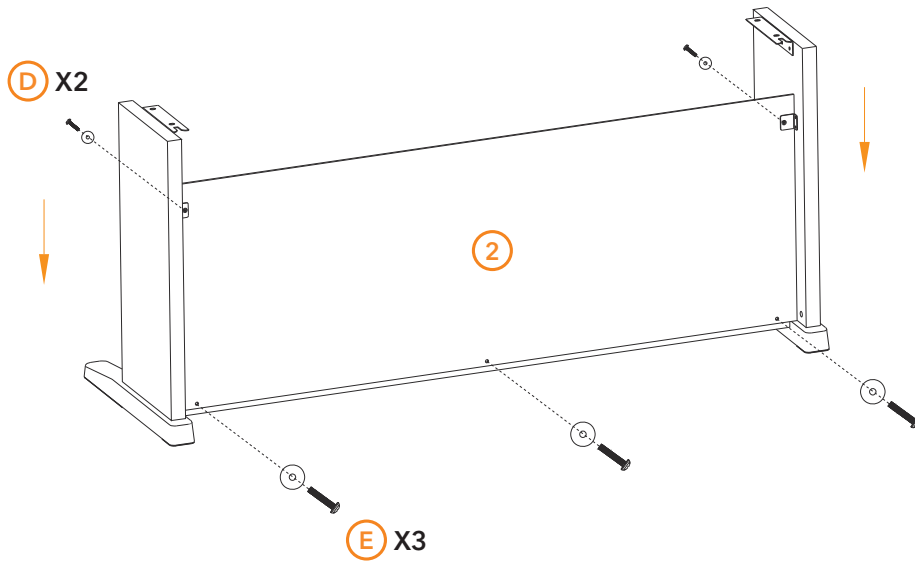

4

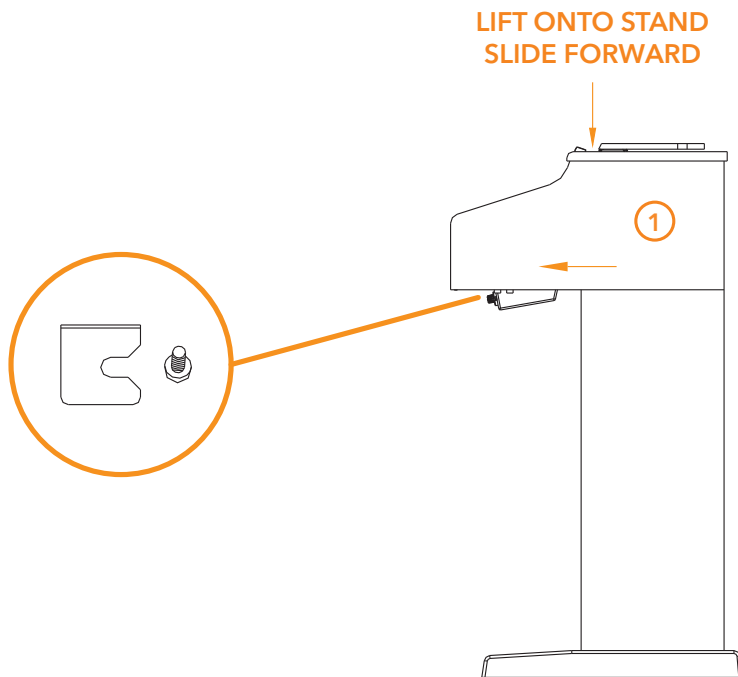



5

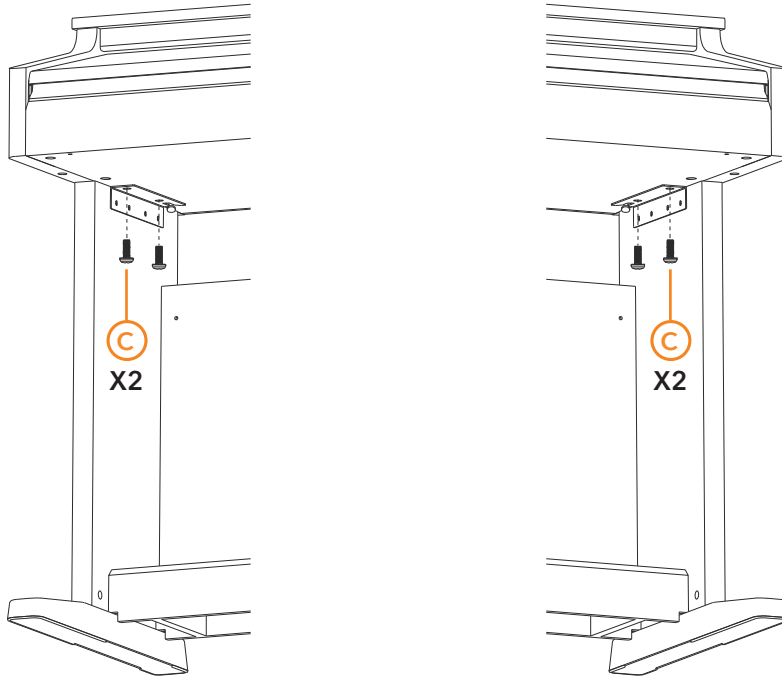

6

BOTTOM OF PIANO

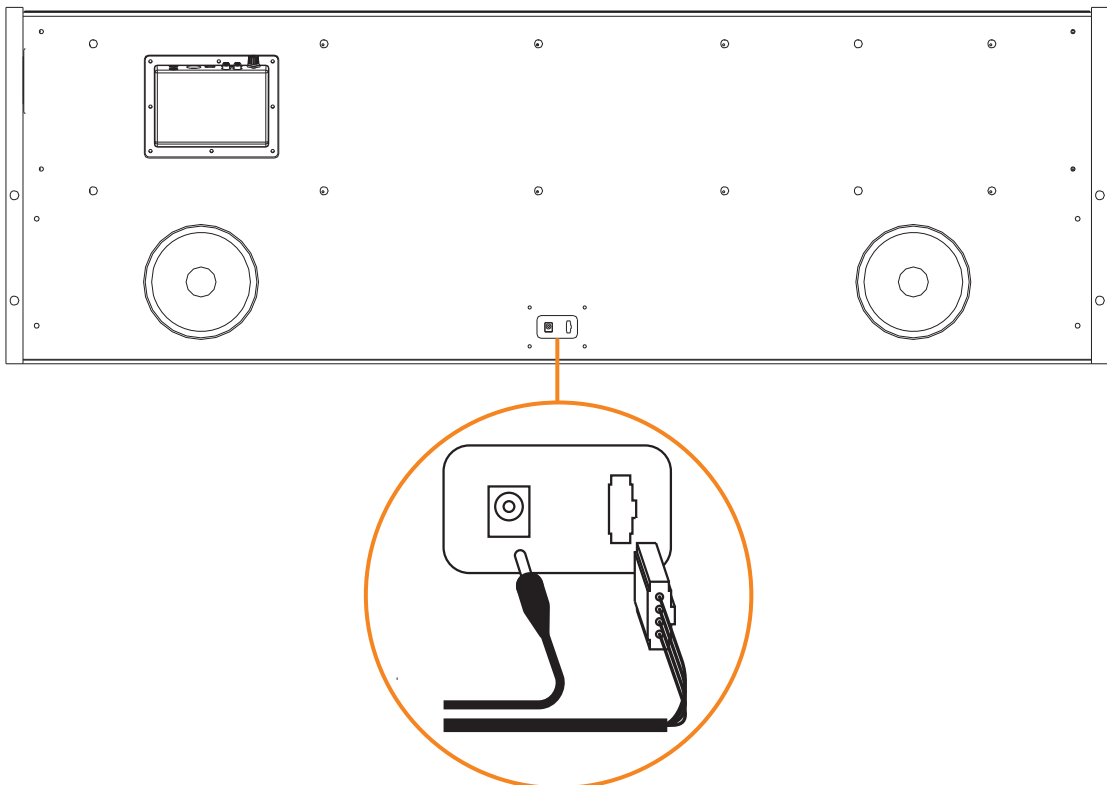

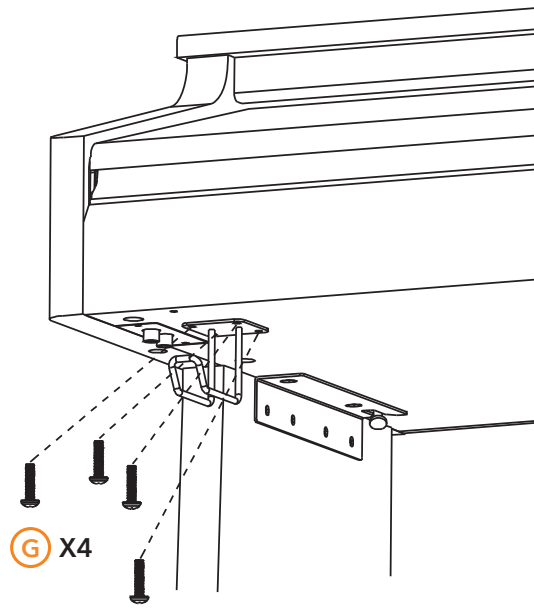

If you have any more questions about this product, please do not hesitate to contact the Gear4music Customer Service Team on: **+44 (0) 330 365 4444** or **info@gear4music.com**