

ONVIF™  
PTZ Service Specification

Version 2.6.1  
December, 2015



© 2008-2015 by ONVIF: Open Network Video Interface Forum Inc.. All rights reserved.

Recipients of this document may copy, distribute, publish, or display this document so long as this copyright notice, license and disclaimer are retained with all copies of the document. No license is granted to modify this document.

THIS DOCUMENT IS PROVIDED "AS IS," AND THE CORPORATION AND ITS MEMBERS AND THEIR AFFILIATES, MAKE NO REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, OR TITLE; THAT THE CONTENTS OF THIS DOCUMENT ARE SUITABLE FOR ANY PURPOSE; OR THAT THE IMPLEMENTATION OF SUCH CONTENTS WILL NOT INFRINGE ANY PATENTS, COPYRIGHTS, TRADEMARKS OR OTHER RIGHTS.

IN NO EVENT WILL THE CORPORATION OR ITS MEMBERS OR THEIR AFFILIATES BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, ARISING OUT OF OR RELATING TO ANY USE OR DISTRIBUTION OF THIS DOCUMENT, WHETHER OR NOT (1) THE CORPORATION, MEMBERS OR THEIR AFFILIATES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR (2) SUCH DAMAGES WERE REASONABLY FORESEEABLE, AND ARISING OUT OF OR RELATING TO ANY USE OR DISTRIBUTION OF THIS DOCUMENT. THE FOREGOING DISCLAIMER AND LIMITATION ON LIABILITY DO NOT APPLY TO, INVALIDATE, OR LIMIT REPRESENTATIONS AND WARRANTIES MADE BY THE MEMBERS AND THEIR RESPECTIVE AFFILIATES TO THE CORPORATION AND OTHER MEMBERS IN CERTAIN WRITTEN POLICIES OF THE CORPORATION.

## CONTENTS

<b>1 Scope</b>	<b>5</b>
<b>2 Normative references</b>	<b>5</b>
<b>3 Terms and Definitions</b>	<b>5</b>
3.1 Definitions.....	5
3.2 Abbreviations .....	5
<b>4 Overview</b>	<b>5</b>
<b>5 Service</b>	<b>7</b>
5.1 PTZ Node.....	7
5.1.1 GetNodes.....	7
5.1.2 GetNode.....	8
5.2 PTZ Configuration.....	8
5.2.1 GetConfigurations.....	9
5.2.2 GetConfiguration.....	10
5.2.3 GetConfigurationOptions .....	10
5.2.4 SetConfiguration .....	11
5.2.5 GetCompatibleConfigurations.....	12
5.3 Move Operations.....	12
5.3.1 AbsoluteMove .....	12
5.3.2 RelativeMove .....	14
5.3.3 ContinuousMove.....	15
5.3.4 Stop.....	16
5.3.5 GetStatus.....	16
5.4 Preset operations .....	17
5.4.1 SetPreset .....	17
5.4.2 GetPresets .....	19
5.4.3 GotoPreset.....	19
5.4.4 RemovePreset .....	20
5.5 Home Position operations .....	21
5.5.1 GotoHomePosition.....	21
5.5.2 SetHomePosition .....	21
5.6 Auxiliary operations .....	22
5.6.1 SendAuxiliaryCommand .....	22
5.7 Predefined PTZ spaces.....	23
5.7.1 Absolute Position Spaces .....	23
5.7.2 Relative Translation Spaces .....	24
5.7.3 Continuous Velocity Spaces .....	24
5.7.4 Speed Spaces.....	25
5.8 Preset Tour Operations.....	26
5.8.1 GetPresetTours.....	26
5.8.2 GetPresetTour .....	27
5.8.3 GetPresetTourOptions.....	27
5.8.4 CreatePresetTour .....	28
5.8.5 ModifyPresetTour .....	28
5.8.6 OperatePresetTour .....	29
5.8.7 RemovePresetTour.....	30
5.8.8 Preset Tour parameters.....	31
5.9 PT Control Direction Configuration .....	32
5.10 Capabilities.....	34

5.11	Service specific data types.....	35
5.11.1	PTZNode .....	35
5.11.2	PTZNodeExtension .....	35
5.11.3	PTZPresetTourSupported .....	36
5.11.4	PTZConfiguration .....	36
5.11.5	PTZConfigurationExtension .....	38
5.11.6	PTControlDirection .....	38
5.11.7	EFlip .....	38
5.11.8	Reverse .....	38
5.11.9	PTZConfigurationOptions.....	38
5.11.10	PTControlDirectionOptions.....	39
5.11.11	PanTiltLimits .....	39
5.11.12	ZoomLimits .....	39
5.11.13	PTZSpaces.....	40
5.11.14	Space2Ddescription .....	41
5.11.15	Space1Ddescription .....	41
5.11.16	Vector2D.....	41
5.11.17	Vector1D.....	42
5.11.18	PTZVector .....	42
5.11.19	PTZSpeed .....	42
5.11.20	PTZStatus.....	43
5.11.21	PTZPreset .....	43
5.11.22	PTZMoveStatus.....	43
5.11.23	PresetTour.....	44
5.11.24	PTZPresetTourSpot.....	44
5.11.25	PTZPresetTourPresetDetail .....	45
5.11.26	PTZPresetTourStatus.....	45
5.11.27	PTZPresetTourStartingCondition .....	45
5.11.28	PTZPresetTourOptions .....	46
5.11.29	PTZPresetTourSpotOptions .....	46
5.11.30	PTZPresetTourPresetDetailOptions.....	46
5.11.31	PTZPresetTourStartingConditionOptions.....	47
5.12	Events .....	47
5.12.1	PTZ Presets.....	47
5.12.2	PresetTours .....	48
5.13	Service specific fault codes.....	48
<b>Annex A.</b>	<b>Revision History</b>	<b>51</b>

## 1 Scope

This document defines the web service interface for configuration and operation of pan tilt zoom controllers.. Additionally the associated events are defined.

Web service usage is outside of the scope of this document. Please refer to the ONVIF core specification.

## 2 Normative references

ONVIF Core Specification

<<http://www.onvif.org/specs/core/ONVIF-Core-Specification-v220.pdf>>

ONVIF Media Service Specification

<<http://www.onvif.org/specs/srv/media/ONVIF-Media-Service-Spec-v220.pdf>>

ONVIF PTZ Coordinate Spaces    ONVIF PTZ Coordinate Spaces White Paper

<[http://www.onvif.org/Portals/0/documents/whitepapers/ONVIF\\_PTZ\\_coordinate\\_spaces.pdf](http://www.onvif.org/Portals/0/documents/whitepapers/ONVIF_PTZ_coordinate_spaces.pdf)>

## 3 Terms and Definitions

### 3.1 Definitions

**Digital PTZ**                  Function that diminishes or crops an image to adjust the image position and ratio.

**Optical zoom**                 Changes the focal length (angle of view) for the device by moving the zoom lens in the camera's optics.

**PTZ node**                      Low-level PTZ entity that maps to the PTZ device and its capabilities.

### 3.2 Abbreviations

PTZ	Pan/Tilt/Zoom
E-Flip	Electrical flip

## 4 Overview

The PTZ model groups the possible movements of the PTZ unit into a Pan/Tilt component and into a Zoom component. To steer the PTZ unit, the service provides absolute move, relative move and continuous move operations. Different coordinate systems and units are used to feed these operations.

The PTZ service provides an AbsoluteMove operation to move the PTZ device to an absolute position. The service expects the absolute position as an argument referencing an absolute coordinate system. The speed of the Pan/Tilt movement and the Zoom movement can be specified optionally. Speed values are positive scalars and do not contain any directional information. It is not possible to specify speeds for Pan and Tilt separately without knowledge about the current position. This approach to specifying a desired position generally produces a non-smooth and non-intuitive action.

A RelativeMove operation is introduced by the PTZ service in order to steer the dome relative to the current position, but without the need to know the current position. The operation expects a positional translation as an argument referencing a relative coordinate system. This specification distinguishes between relative and absolute coordinate systems, since there are cases where no absolute coordinate system exists for a well-defined relative coordinate

system. An optional speed argument can be added to the RelativeMove operation with the same meaning as for the AbsoluteMove operation.

Finally, the PTZ device can be moved continuously via the ContinuousMove command in a certain direction with a certain speed. Thereby, a velocity vector represents both, the direction and the speed information. The latter is expressed by the length of the vector.

The Pan/Tilt and Zoom coordinates can be uniquely specified by augmenting the coordinates with appropriate space URIs. A space URI uniquely represents the underlying coordinate system. Section 5.7 defines a standard set of coordinate systems. A PTZ Node shall implement these coordinate systems if the corresponding type of movement is supported by the PTZ Node. In many cases, the Pan/Tilt position is represented by pan and tilt angles in a spherical coordinate system. A digital PTZ, operating on a fixed megapixel camera, may express the camera's viewing direction by a pixel position on a static projection plane. Therefore, different coordinate systems are needed in this case in order to capture the physical or virtual movements of the PTZ device. These and other additional coordinate systems are defined in a separate document, *ONVIF PTZ Coordinate Spaces* white paper. Optionally, the PTZ Node may define its own device specific coordinate systems to enable clients to take advantage of the specific properties of this PTZ Node.

The PTZ Node description retrieved via the GetNode or GetNodes operation contains all coordinate systems supported by a specific PTZ Node. Each coordinate system belongs to one of the following groups:

- AbsolutePanTiltPositionSpace
- RelativePanTiltTranslationSpace
- ContinuousPanTiltVelocitySpace
- PanTiltSpeedSpace
- AbsoluteZoomPositionSpace
- RelativeZoomTranslationSpace
- ContinuousZoomVelocitySpace
- ZoomSpeedSpace

If the PTZ node does not support the coordinate systems of a certain group, the corresponding move operation will not be available for this PTZ node. For instance, if the list does not contain an AbsolutePanTiltPositionSpace, the AbsoluteMove operation shall fail when an absolute Pan/Tilt position is specified. The corresponding command section describes those spaces that are required for a specific move command.

WSDL for this service is specified in <http://www.onvif.org/onvif/ver20/ptz/wsdl/ptz.wsdl>.

**Table 1: Referenced namespaces (with prefix)**

Prefix	Namespace URI
env	<a href="http://www.w3.org/2003/05/soap-envelope">http://www.w3.org/2003/05/soap-envelope</a>
ter	<a href="http://www.onvif.org/ver10/error">http://www.onvif.org/ver10/error</a>
xs	<a href="http://www.w3.org/2001/XMLSchema">http://www.w3.org/2001/XMLSchema</a>
tt	<a href="http://www.onvif.org/ver10/schema">http://www.onvif.org/ver10/schema</a>
tptz	<a href="http://www.onvif.org/ver20/ptz/wsdl">http://www.onvif.org/ver20/ptz/wsdl</a>

## 5 Service

### 5.1 PTZ Node

A PTZ-capable device can have multiple PTZ nodes. The PTZ nodes may represent mechanical PTZ drivers, uploaded PTZ drivers or digital PTZ drivers. PTZ nodes are the lowest level entities in the PTZ control API and reflect the supported PTZ capabilities. The PTZ node is referenced either by its name or by its reference token. The PTZ Service does not provide operations to create or manipulate PTZ nodes.

The following properties shall be provided for all PTZ nodes:

- Token – A unique identifier that is used to reference PTZ nodes.
- Name – A name given by the installer.
- SupportedPTZSpaces – A list of coordinate systems available for the PTZ node. For each Coordinate System, the PTZ node shall specify its allowed range.
- MaximumNumberOfPresets – All preset operations shall be available for this PTZ node if one preset is supported.
- HomeSupported – A boolean operator specifying the availability of a home position. If set to true, the Home Position Operations shall be available for this PTZ node.
- AuxiliaryCommands – A list of supported Auxiliary commands. If the list is not empty, the Auxiliary Operations shall be available for this PTZ node. A device may use auxiliary commands that are described in Core Specification.
- MaximumNumberOfPresetTours – Indicates number of preset tours that can be created. Required preset tour operations shall be available for this PTZ Node if one or more preset tour is supported.

#### 5.1.1 GetNodes

A PTZ-capable device shall implement this operation and return all PTZ nodes available on the device.

**Table 2: GetNodes command**

<b>GetNodes</b>		Access Class: READ_MEDIA
Message name	Description	
GetNodesRequest	<i>This is an empty message.</i>	
GetNodesResponse	<i>The response message contains a list of the existing PTZ Nodes on the device.</i>  tt:PTZNode <b>PTZNode[0][unbounded]</b>	
Fault codes	Description	
env:Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported by the device.</i>	

### 5.1.2 GetNode

A PTZ-capable device shall implement the GetNode operation and return the properties of the requested PTZ node, if it exists. Otherwise, the device shall respond with an appropriate fault message.

**Table 3: GetNode command**

<b>GetNode</b>		Access Class: READ_MEDIA
Message name	Description	
GetNodeRequest	<p><i>This message contains a reference to the requested PTZNode</i></p> <p>tt:ReferenceToken <b>NodeToken[1][1]</b></p>	
GetNodeResponse	<p><i>The PTZNode response message contains the requested PTZNode.</i></p> <p>tt:PTZNode <b>PTZNode[1][1]</b></p>	
Fault codes	Description	
env:Sender ter:InvalidArgVal ter>NoEntity	<i>No such PTZNode on the device</i>	
env:Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>	

## 5.2 PTZ Configuration

The PTZConfiguration contains a reference to the PTZ node in which it belongs. This reference cannot be changed by a client.

The following elements are part of the PTZ Configuration:

- PTZNodeToken – A mandatory reference to the PTZ node that the PTZ Configuration belongs to.
- DefaultAbsolutePanTiltPositionSpace – If the PTZ node supports absolute Pan/Tilt movements, it shall specify one Absolute Pan/Tilt Position Space as default.
- DefaultRelativePanTiltTranslationSpace – If the PTZ node supports relative Pan/Tilt movements, it shall specify one RelativePan/Tilt Translation Space as default.
- DefaultContinuousPanTiltVelocitySpace – If the PTZ node supports continuous Pan/Tilt movements, it shall specify one continuous Pan/Tilt velocity space as default.
- DefaultPanTiltSpeedSpace – If the PTZ node supports absolute or relative movements, it shall specify one Pan/Tilt speed space as default.
- DefaultAbsoluteZoomPositionSpace – If the PTZ node supports absolute zoom movements, it shall specify one absolute zoom position space as default.
- DefaultRelativeZoomTranslationSpace – If the PTZ node supports relative zoom movements, it shall specify one relative zoom translation space as default.

- DefaultContinuousZoomVelocitySpace – If the PTZ node supports continuous zoom movements, it shall specify one continuous zoom velocity space as default.
- DefaultPTZSpeed – If the PTZ node supports absolute or relative PTZ movements, it shall specify corresponding default Pan/Tilt and Zoom speeds.
- DefaultPTZTimeout – If the PTZ node supports continuous movements, it shall specify a default timeout, after which the movement stops.
- PanTiltLimits – The Pan/Tilt limits element should be present for a PTZ node that supports an absolute Pan/Tilt. If the element is present it signals the support for configurable Pan/Tilt limits. If limits are enabled, the Pan/Tilt movements shall always stay within the specified range. The Pan/Tilt limits are disabled by setting the limits to -INF or +INF.
- ZoomLimits – The zoom limits element should be present for a PTZ node that supports absolute zoom. If the element is present it signals the supports for configurable zoom limits. If limits are enabled the zoom movements shall always stay within the specified range. The Zoom limits are disabled by settings the limits to -INF and +INF.
- MoveRamp – The optional acceleration ramp used by the device when moving.
- PresetRamp – The optional acceleration ramp used by the device when recalling presets.
- PresetTourRamp – The optional acceleration ramp used by the device when executing PresetTours.

The default position/translation/velocity spaces are introduced to allow clients sending move requests without the need to specify a certain coordinate system. The default speeds are introduced to control the speed of move requests (absolute, relative, preset), where no explicit speed has been set.

The allowed pan and tilt range for Pan/Tilt limits is defined by a two-dimensional space range that is mapped to a specific absolute Pan/Tilt position space. At least one Pan/Tilt position space is required by the PTZNode to support Pan/Tilt limits. The limits apply to all supported absolute, relative and continuous Pan/Tilt movements. The limits shall be checked within the coordinate system for which the limits have been specified. That means that even if movements are specified in a different coordinate system, the requested movements shall be transformed to the coordinate system of the limits where the limits can be checked. When a relative or continuous movements is specified, which would leave the specified limits, the PTZ unit has to move along the specified limits. The Zoom Limits have to be interpreted accordingly.

### 5.2.1 GetConfigurations

A PTZ-capable device shall return all available PTZConfigurations through the GetConfigurations operation.

**Table 4: GetConfigurations command**

<b>GetConfigurations</b>		Access Class: READ_MEDIA
<b>Message name</b>	<b>Description</b>	
GetConfigurations	<i>This is an empty message.</i>	

GetConfigurationsResponse	<i>The response contains all existing PTZConfigurations on the device.</i> tt:PTZConfiguration <b>PTZConfiguration</b> [0][unbounded]
<b>Fault codes</b>	<b>Description</b>
env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>

### 5.2.2 GetConfiguration

A PTZ-capable device shall return the requested PTZ configuration, if it exists, through the GetConfiguration operation.

**Table 5: GetConfiguration command**

<b>GetConfiguration</b>		Access Class: READ_MEDIA
Message name	Description	
GetConfigurationRequest	<i>This message contains a reference to the requested PTZConfiguration.</i> Tt:ReferenceToken <b>ConfigurationToken</b> [1][1]	
GetConfigurationResponse	<i>The response contains the requested PTZConfiguration</i> tt:PTZConfiguration <b>PTZConfiguration</b> [1][1]	
<b>Fault codes</b>	<b>Description</b>	
env:Sender ter: InvalidArgVal ter:NoConfig	<i>The requested configuration does not exist.</i>	
Env:Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported by the device.</i>	

### 5.2.3 GetConfigurationOptions

A PTZ-capable device shall implement the GetConfigurationOptions operation. It returns the list of supported coordinate systems including their range limitations. Therefore, the options MAY differ depending on whether the PTZ configuration is assigned to a profile(see ONVIF Media Service Specification) containing a VideoSourceConfiguration. In that case, the options may additionally contain coordinate systems referring to the image coordinate system described by the VideoSourceConfiguration. Each listed coordinate system belongs to one of the groups listed in Section 4. If the PTZ node supports continuous movements, it shall return a timeout range within which timeouts are accepted by the PTZ node.

**Table 6: GetConfigurationOptions command**

<b>GetConfigurationOptions</b>		Access Class: READ_MEDIA
Message name	Description	
GetConfigurationOptions-Request	<i>This message contains a token to a PTZ configuration.</i> <b>ConfigurationToken</b> specifies an existing configuration that the options are intended for. tt:ReferenceToken <b>ConfigurationToken</b> [1][1]	

GetConfigurationOptions-Response	<p><i>This message contains the PTZ configuration options.</i></p> <p>tt:PTZConfigurationOptions <b>PTZConfigurationOptions[1][1]</b></p>
<b>Fault codes</b>	<b>Description</b>
env:Sender ter:InvalidArgVal ter:NoConfig	<i>The requested configuration does not exist.</i>
Env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>

#### 5.2.4 SetConfiguration

A PTZ-capable device shall implement the SetConfiguration operation. The ForcePersistence flag indicates if the changes remain after reboot of the device.

**Table 7: SetConfiguration command**

<b>SetConfiguration</b>		Access Class: ACTUATE
Message name	Description	
SetConfigurationRequest	<p><i>The <b>PTZConfiguration</b> element contains the modified PTZ configuration. The configuration shall exist in the device.</i></p> <p><i>The <b>ForcePersistence</b> element determines if the configuration changes shall be stored and remain after reboot. If true, changes shall be persistent. If false, changes MAY revert to previous values after reboot.</i></p> <p>tt:PTZConfiguration <b>PTZConfiguration[1][1]</b> xs:boolean <b>ForcePersistence[1][1]</b></p>	
SetConfigurationResponse	<i>This is an empty message.</i>	
<b>Fault codes</b>	<b>Description</b>	
env:Sender ter:InvalidArgVal ter:NoConfig	<i>The configuration does not exist.</i>	
Env:Sender ter:InvalidArgVal ter:ConfigModify	<i>The configuration parameters are not possible to set.</i>	
Env:Receiver ter:Action ter:ConfigurationConflict	<i>The new settings conflict with other uses of the configuration.</i>	
Env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>	

### 5.2.5 GetCompatibleConfigurations

A device signalling support for GetCompatibleConfigurations via the capability GetCompatibleConfigurations shall return all available PTZConfigurations that can be added to the referenced media profile through the GetComatibleConfigurations operation.

A device providing more than one PTZConfiguration or more than one VideoSourceConfiguration or which has any other resource interdependency between PTZConfiguration entities and other resources listable in a media profile should implement this operation. PTZConfiguration entities returned by this operation shall not fail on adding them to the referenced media profile.

**Table 8: GetCompatibleConfigurations command**

<b>GetCompatibleConfigurations</b>		Access Class: READ_MEDIA
Message name	Description	
GetCompatibleConfigurations	<p><i>Contains the token of an existing media profile.</i></p> <p>tt:ReferenceToken <b>ProfileToken</b> [1][1]</p>	
GetCompatibleConfigurationsResponse	<p><i>The response contains all existing PTZConfigurations on the device that can be added to the addressed media profile in its current state.</i></p> <p>tt:PTZConfiguration <b>PTZConfiguration</b> [0][unbounded]</p>	
<b>Fault codes</b>		Description
env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>	
env: Receiver ter:ActionNotSupported ter:OptionalActionNotSupported	<i>This method is not implemented by the device.</i>	

## 5.3 Move Operations

This section describes three operations to move the PTZ unit absolutely, relatively or continuously. All operations require a *ProfileToken* referencing a Media Profile including a PTZConfiguration.

All move commands shall be implemented non-blocking, meaning they shall not wait until the requested move operation has finished. The last move operation can be overwritten by sending another move request.

Due to the wide range of physical devices this specification addresses, the specification does not require a specific response time to PTZ move operations. However, a device shall strive for minimal latency regarding PTZ move command request-to-response time. Note that the device controls command delay and video encoding delay; network delay and client delay also affect the user experience but cannot be controlled by the device.

### 5.3.1 AbsoluteMove

If a PTZ node supports absolute Pan/Tilt or absolute Zoom movements, it shall support the AbsoluteMove operation. The position argument of this command specifies the absolute

position to which the PTZ unit moves. It splits into an optional Pan/Tilt element and an optional Zoom element. If the Pan/Tilt position is omitted, the current Pan/Tilt movement shall NOT be affected by this command. The same holds for the zoom position.

The spaces referenced within the position shall be absolute position spaces supported by the PTZ node. If the space information is omitted, the corresponding default spaces of the PTZ configuration, a part of the specified Media Profile, is used. A device may support absolute Pan/Tilt movements, absolute Zoom movements or no absolute movements by providing only absolute position spaces for the supported cases.

An existing Speed argument overrides the DefaultSpeed of the corresponding PTZ configuration during movement to the requested position. If spaces are referenced within the Speed argument, they shall be Speed Spaces supported by the PTZ Node.

The operation shall fail if the requested absolute position is not reachable.

**Table 9: AbsoluteMove command**

<b>AbsoluteMove</b>		Access Class: ACTUATE
Message name	Description	
AbsoluteMoveRequest	<p><i>This message contains a reference to the media profile, a <b>Position</b> vector specifying the absolute target position and an optional <b>Speed</b>.</i></p> <p>tt:ReferenceToken <b>ProfileToken</b> [1][1]            tt:PTZVector <b>Position</b> [1][1]            tt:PTZSpeed <b>Speed</b> [0][1]</p>	
AbsoluteMoveResponse	<i>This is an empty message</i>	
Fault codes	Description	
env:Sender ter:InvalidArgVal ter:NoProfile	<i>The requested profile token <b>ProfileToken</b> does not exist.</i>	
Env:Sender ter:InvalidArgVal ter:NoPTZProfile	<i>The requested profile token does not reference a PTZ configuration.</i>	
Env:Sender ter:InvalidArgVal ter:SpaceNotSupported	<i>A space is referenced in an argument which is not supported by the PTZ Node.</i>	
Env:Sender ter:InvalidArgVal ter:InvalidPosition	<i>The requested position is out of bounds.</i>	
Env:Sender ter:InvalidArgVal ter:InvalidSpeed	<i>The requested speed is out of bounds.</i>	
Env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>	

### 5.3.2 RelativeMove

If a PTZ node supports relative Pan/Tilt or relative Zoom movements, then it shall support the RelativeMove operation. The translation argument of this operation specifies the difference from the current position to the position to which the PTZ device is instructed to move. The operation is split into an optional Pan/Tilt element and an optional Zoom element. If the Pan/Tilt element is omitted, the current Pan/Tilt movement shall NOT be affected by this command. The same holds for the zoom element.

The spaces referenced within the translation element shall be translation spaces supported by the PTZ node. If the space information is omitted for the translation argument, the corresponding default spaces of the PTZ configuration, which is part of the specified Media Profile, is used. A device may support relative Pan/Tilt movements, relative Zoom movements or no relative movements by providing only translation spaces for the supported cases.

An existing speed argument overrides the DefaultSpeed of the corresponding PTZ configuration during movement by the requested translation. If spaces are referenced within the speed argument, they shall be speed spaces supported by the PTZ node.

The command can be used to stop the PTZ unit at its current position by sending zero values for Pan/Tilt and Zoom. Stopping shall have the very same effect independent of the relative space referenced.

If the requested translation leads to an absolute position which cannot be reached, the PTZ Node shall move to a reachable position along the border of valid positions.

**Table 10: RelativeMove command**

<b>RelativeMove</b>		Access Class: ACTUATE
<b>Message name</b>	<b>Description</b>	
RelativeMoveRequest	<p><i>This message contains a reference to the media profile, a positional <b>Translation</b> relative to the current position and an optional <b>Speed</b> parameter.</i></p> <p><b>tt:ReferenceToken</b> <b>ProfileToken</b> [1][1]  <b>tt:PTZVector</b> <b>Translation</b> [1][1]  <b>tt:PTZSpeed</b> <b>Speed</b> [0][1]</p>	
RelativeMoveResponse	<p><i>This is an empty message</i></p>	
<b>Fault codes</b>	<b>Description</b>	
env:Sender ter:InvalidArgVal ter>NoProfile	<p><i>The requested profile token <b>ProfileToken</b> does not exist.</i></p>	
Env:Sender ter:InvalidArgVal ter>NoPTZProfile	<p><i>The requested profile token does not reference a PTZ configuration.</i></p>	
Env:Sender ter:InvalidArgVal ter:SpaceNotSupported	<p><i>A space is referenced in an argument which is not supported by the PTZ Node.</i></p>	
Env:Sender ter:InvalidArgVal ter:InvalidTranslation	<p><i>The requested translation is out of bounds.</i></p>	

Env:Sender ter:InvalidArgVal ter:InvalidSpeed	<i>The requested speed is out of bounds.</i>
Env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>

### 5.3.3 ContinuousMove

A PTZ-capable device shall support continuous movements. The velocity argument of this command specifies a signed speed value for the Pan, Tilt and Zoom. The combined Pan/Tilt element is optional and the Zoom element itself is optional. If the Pan/Tilt element is omitted, the current Pan/Tilt movement shall NOT be affected by this command. The same holds for the Zoom element. The spaces referenced within the velocity element shall be velocity spaces supported by the PTZ Node. If the space information is omitted for the velocity argument, the corresponding default spaces of the PTZ configuration belonging to the specified Media Profile is used. A device MAY support continuous Pan/Tilt movements and/or continuous Zoom movements by providing only velocity spaces for the supported cases.

An existing timeout argument overrides the DefaultPTZTimeout parameter of the corresponding PTZ configuration for this Move operation. The timeout parameter specifies how long the PTZ node continues to move.

A device shall stop movement in a particular axis (Pan, Tilt, or Zoom) when zero is sent as the ContinuousMove parameter for that axis. Stopping shall have the same effect independent of the velocity space referenced. This command has the same effect on a continuous move as the stop command specified in Section 5.3.4.

If the requested velocity leads to absolute positions which cannot be reached, the PTZ node shall move to a reachable position along the border of its range. A typical application of the continuous move operation is controlling PTZ via joystick.

**Table 11: ContinuousMove command**

<b>ContinuousMove</b>		Access Class: ACTUATE
Message name	Description	
ContinuousMoveRequest	<p><i>This message contains a reference to the media profile, a <b>Velocity</b> vector specifying the velocity of pan, tilt and zoom, and an optional <b>Timeout</b> parameter.</i></p> <p>tt:ReferenceToken <b>ProfileToken</b> [1][1]            tt:PTZSpeed <b>Velocity</b> [1][1]            xs:duration <b>Timeout</b> [0][1]</p>	
ContinuousMoveResponse	<i>This is an empty message.</i>	
Fault codes	Description	
env:Sender ter:InvalidArgVal ter>NoProfile	<i>The requested profile token <b>ProfileToken</b> does not exist.</i>	
Env:Sender ter:InvalidArgVal ter>NoPTZProfile	<i>The requested profile token does not reference a PTZ configuration.</i>	

Env:Sender ter:InvalidArgVal ter:SpaceNotSupported	<i>A space is referenced in an argument which is not supported by the PTZ node.</i>
Env:Sender ter:InvalidArgVal ter:TimeoutNotSupported	<i>The specified timeout argument is not within the supported timeout range.</i>
Env:Sender ter:InvalidArgVal ter:InvalidVelocity	<i>The requested velocity is out of bounds.</i>
Env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>

### 5.3.4 Stop

A PTZ-capable device shall support the stop operation. If no stop filter arguments are present, this command stops all ongoing pan, tilt and zoom movements. The stop operation can be filtered to stop a specific movement by setting the corresponding stop argument.

**Table 12: Stop (PTZ) command**

<b>Stop</b>		Access Class: ACTUATE
Message name	Description	
StopRequest	<p><i>This message contains a reference to the MediaProfile and parameters that indicate what should be stopped.</i></p> <p>tt:ReferenceToken <b>ProfileToken</b>[1][1] xs:boolean <b>PanTilt</b> [0][1] xs:boolean <b>Zoom0</b>[1]</p>	
StopResponse	<i>This is an empty message.</i>	
Fault codes	Description	
env:Sender ter:InvalidArgVal ter:NoProfile	<i>The requested profile token <b>ProfileToken</b> does not exist.</i>	
Env:Sender ter:InvalidArgVal ter:NoPTZProfile	<i>The requested profile token does not reference a PTZ configuration.</i>	
Env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>	

### 5.3.5 GetStatus

A PTZ-capable device shall be able to report its PTZ status through the GetStatus command. The PTZ status contains the following information:

- Position (optional) – Specifies the absolute position of the PTZ unit together with the space references. The default absolute spaces of the corresponding PTZ configuration shall be referenced within the position element. This information shall be present if the device signals support via the capability StatusPosition.

- MoveStatus (optional) – Indicates if the Pan/Tilt/Zoom device unit is currently moving, idle or in an unknown state. This information shall be present if the device signals support via the capability MoveStatus. The state Unknown shall not be used during normal operation, but is reserved to initialization or error conditions.
- Error (optional) – States a current PTZ error condition. This field shall be present if the MoveStatus signals Unknown.
- UTC Time – Specifies the UTC time when this status was generated.

**Table 13: GetStatus (PTZ) command**

<b>GetStatus</b>		Access Class: READ_MEDIA
Message name	Description	
GetStatusRequest	<p><i>This message contains a reference to the media profile where the PTZStatus should be requested.</i></p> <p>tt:ReferenceToken <b>ProfileToken[1][1]</b></p>	
GetStatusResponse	<p><i>This message contains the PTZStatus for the requested MediaProfile.</i></p> <p>tt:PTZStatus <b>PTZStatus[1][1]</b></p>	
Fault codes	Description	
env:Sender ter:InvalidArgVal ter:NoProfile	<i>The requested profile does not exist.</i>	
Env:Sender ter:InvalidArgVal ter:NoPTZProfile	<i>The requested profile token does not reference a PTZ configuration.</i>	
Env:Receiver ter:Action ter:NoStatus	<i>No PTZ status is available in the requested Media Profile.</i>	
Env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>	

## 5.4 Preset operations

This section describes operations that manage the presets of a PTZ node. These operations shall be implemented for PTZ nodes supporting presets. All operations require a *ProfileToken* referencing a Media Profile including a PTZConfiguration.

### 5.4.1 SetPreset

The SetPreset command saves the *current* device position parameters so that the device can move to the saved preset position through the GotoPreset operation.

If the PresetToken parameter is absent, the device shall create a new preset. Otherwise it shall update the stored position and optionally the name of the given preset. If creation is successful, the response contains the PresetToken which uniquely identifies the preset. An existing preset can be overwritten by specifying the PresetToken of the corresponding preset. In both cases (overwriting or creation) an optional PresetName can be specified. The operation fails if the PTZ device is moving during the SetPreset operation.

The device MAY internally save additional states such as imaging properties in the PTZ preset which then should be recalled in the GotoPreset operation. A device shall accept a valid SetPresetRequests that does not include the optional element PresetName.

If the PresetName is included in a SetPresetRequests call, then the device may require the PresetName to be unique. If a device rejects a SetPresetRequests because the device requires the PresetName to be unique, then it shall respond with the error message ter:PresetExist.

**Table 14: SetPreset command**

<b>SetPreset</b>		Access Class: ACTUATE
<b>Message name</b>	<b>Description</b>	
SetPresetRequest	<p><i>This message contains a reference to the MediaProfile and the requested name or token for the preset.</i></p> <p>ttReferenceToken <b>ProfileToken[1][1]</b>            tt:ReferenceToken <b>PresetToken[0][1]</b>            xs:string <b>PresetName[0][1]</b></p>	
SetPresetResponse	<p><i>This message contains a reference to the Preset which has been set.</i></p> <p>tt:ReferenceToken <b>PresetToken[1][1]</b></p>	
<b>Fault codes</b>	<b>Description</b>	
env:Sender ter:InvalidArgVal ter:PresetExist	<p><i>The requested name already exist for another preset.</i></p>	
Env:Sender ter:InvalidArgVal ter:InvalidPresetName	<p><i>The PresetName is either too long or contains invalid characters.</i></p>	
Env:Receiver ter:Action ter:MovingPTZ	<p><i>Preset cannot be set while PTZ unit is moving.</i></p>	
Env:Receiver ter:Action ter:TooManyPresets	<p><i>Maximum number of Presets reached.</i></p>	
Env:Sender ter:InvalidArgVal ter>NoProfile	<p><i>The requested profile token <b>ProfileToken</b> does not exist.</i></p>	
Env:Sender ter:InvalidArgVal ter>NoToken	<p><i>The requested preset token does not exist.</i></p>	
Env:Sender ter:InvalidArgVal ter>NoPTZProfile	<p><i>The requested profile token does not reference a PTZ configuration.</i></p>	
Env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<p><i>PTZ is not supported.</i></p>	

### 5.4.2 GetPresets

The GetPresets operation returns the saved presets consisting of the following elements:

- Token – A unique identifier to reference the preset.
- Name – An optional mnemonic name.
- PTZ Position – An optional absolute position. If the PTZ node supports absolute Pan/Tilt position spaces, the Pan/Tilt position shall be specified. If the PTZ node supports absolute zoom position spaces, the zoom position shall be specified.

**Table 15: GetPresets command**

<b>GetPresets</b>		Access Class: READ_MEDIA
Message name	Description	
GetPresetsRequest	<p><i>This message contains a reference to the MediaProfile where the operation should take place.</i></p> <p>tt:ReferenceToken <b>ProfileToken</b>[1][1]</p>	
GetPresetsResponse	<p><i>This message contains a list of presets which are available for the requested MediaProfile.</i></p> <p>tt:PTZPreset <b>Preset</b>[0][unbounded]</p>	
<b>Fault codes</b>		Description
env:Sender ter:InvalidArgVal ter>NoProfile	<i>The requested profile token <b>ProfileToken</b> does not exist.</i>	
Env:Sender ter:InvalidArgVal ter>NoPTZProfile	<i>The requested profile token does not reference a PTZ configuration.</i>	
Env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>	

### 5.4.3 GotoPreset

The GotoPreset operation recalls a previously set preset. If the speed parameter is omitted, the default speed of the corresponding PTZ configuration shall be used. The speed parameter can only be specified when speed spaces are available for the PTZ node. The GotoPreset command is a non-blocking operation and can be interrupted by other move commands.

**Table 16: GotoPreset command**

<b>GotoPreset</b>		Access Class: ACTUATE
Message name	Description	
GotoPresetRequest	<p><i>This message contains a reference to the MediaProfile where the move to the preset identified by its token should take place.</i></p> <p>tt:ReferenceToken <b>ProfileToken</b>[1][1] tt:ReferenceToken <b>PresetToken</b>[1][1] tt:PTZSpeed <b>Speed</b>[0][1]</p>	

GotoPresetResponse	<i>This is an empty message.</i>
<b>Fault codes</b>	<b>Description</b>
env:Sender ter:InvalidArgVal ter:NoProfile	<i>The requested profile token <b>ProfileToken</b> does not exist.</i>
Env:Sender ter:InvalidArgVal ter:NoToken	<i>The requested preset token does not exist.</i>
Env:Sender ter:InvalidArgVal ter:SpaceNotSupported	<i>A space is referenced in an argument which is not supported by the PTZ node.</i>
Env:Sender ter:InvalidArgVal ter:NoPTZProfile	<i>The requested profile token does not reference a PTZ configuration.</i>
Env:Sender ter:InvalidArgs ter:InvalidSpeed	<i>The requested speed is out of bounds.</i>
Env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>

#### 5.4.4 RemovePreset

The RemovePreset operation removes a previously set preset.

**Table 17: RemovePreset command**

<b>RemovePreset</b>	Access Class: ACTUATE
<b>Message name</b>	<b>Description</b>
RemovePresetRequest	<i>This message contains a reference to the MediaProfile where the preset identified by the token should be removed.</i>  <i>tt:ReferenceToken <b>ProfileToken</b>[1][1]</i> <i>tt:ReferenceToken <b>PresetToken</b>[1][1]</i>
RemovePresetResponse	<i>This is an empty message.</i>
<b>Fault codes</b>	<b>Description</b>
env:Sender ter:InvalidArgVal ter:NoProfile	<i>The requested profile token <b>ProfileToken</b> does not exist.</i>
Env:Sender ter:InvalidArgVal ter:NoToken	<i>The requested preset token does not exist.</i>
Env:Sender ter:InvalidArgVal ter:NoPTZProfile	<i>The requested profile token does not reference a PTZ configuration.</i>
Env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>

## 5.5 Home Position operations

This section describes operations used to manage the home position of a PTZ node. These operations shall be implemented for PTZ nodes supporting home positions. All operations require a *ProfileToken* referencing a Media Profile including a PTZConfiguration.

The “home” position MAY be set by the SetHome operation or is a fix position of the PTZ unit.

### 5.5.1 GotoHomePosition

This operation moves the PTZ unit to its home position. If the speed parameter is omitted, the default speed of the corresponding PTZ configuration shall be used. The speed parameter can only be specified when speed spaces are available for the PTZ node. The command is non-blocking and can be interrupted by other move commands.

**Table 18: GotoHomePosition command**

<b>GotoHomePosition</b>		Access Class: ACTUATE
Message name	Description	
GotoHomePositionRequest	<p><i>This message contains a reference to the MediaProfile where the operation should take place.</i></p> <p>tt:ReferenceToken <b>ProfileToken</b>[1][1] tt:PTZSpeed <b>Speed</b>[0][1]</p>	
GotoHomePositionResponse	<i>This is an empty message.</i>	
Fault codes	Description	
env:Sender ter:InvalidArgVal ter:NoProfile	<i>The requested profile token <b>ProfileToken</b> does not exist.</i>	
Env:Receiver ter:Action ter:NoHomePosition	<i>No home position has been defined for this Profile.</i>	
Env:Sender ter:InvalidArgVal ter:NoPTZProfile	<i>The requested profile token does not reference a PTZ configuration.</i>	
Env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>	

### 5.5.2 SetHomePosition

The SetHome operation saves the *current* position parameters as the home position, so that the GotoHome operation can request that the device move to the home position.

The SetHomePosition command shall return with a failure if the “home” position is fixed and cannot be overwritten. If the SetHomePosition is successful, it shall be possible to recall the home position with the GotoHomePosition command.

**Table 19: SetHomePosition command**

<b>SetHomePosition</b>		Access Class: ACTUATE
Message name	Description	
SetHomePositionRequest	<p><i>This message contains a reference to the MediaProfile where the home position should be set.</i></p> <p>tt:ReferenceToken <b>ProfileToken[1][1]</b></p>	
SetHomePositionResponse	<i>This message is empty.</i>	
Fault codes	Description	
env:Sender ter:InvalidArgVal ter:NoProfile	<i>The requested profile token <b>ProfileToken</b> does not exist.</i>	
Env:Sender ter:InvalidArgVal ter:NoPTZProfile	<i>The requested profile token does not reference a PTZ configuration.</i>	
Env:Receiver ter:Action ter:CannotOverwriteHome	<i>The home position is fixed and cannot be overwritten.</i>	
Env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>	

## 5.6 Auxiliary operations

This section describes operations to manage auxiliary commands of a PTZ node, such as an infrared (IR) lamp, a heater or a wiper.

These operations shall be implemented for PTZ nodes indicating auxiliary commands in the node properties. All operations require a *ProfileToken* referencing a Media Profile including a *PTZConfiguration*.

### 5.6.1 SendAuxiliaryCommand

This operation is used to call an auxiliary operation on the device. The supported commands can be retrieved via the PTZ node properties. The *AuxiliaryCommand* should match the supported command listed in the PTZ node; no other syntax is supported. If the PTZ node lists the *irlampon* command, then the *AuxiliaryCommand* argument would be *irlampon*. The *SendAuxiliaryCommand* shall be implemented when the PTZ node supports auxiliary commands.

**Table 20: Send Auxiliary command**

<b>SendAuxiliaryCommand</b>		Access Class: ACTUATE
Message name	Description	
SendAuxiliaryCommandRequest	<p><i>This message contains a reference to the MediaProfile where the Auxiliary request should be done and the Auxiliary request data.</i></p> <p>tt:ReferenceToken <b>ProfileToken[1][1]</b></p> <p>tt:AuxiliaryData <b>AuxiliaryData[1][1]</b></p>	

SendAuxiliaryCommandResponse	<i>The response contains the auxiliary response.</i>  tt:AuxiliaryData <b>AuxiliaryResponse[1][1]</b>
<b>Fault codes</b>	<b>Description</b>
env:Sender ter:InvalidArgValue ter:NoProfile	<i>The requested profile token <b>ProfileToken</b> does not exist.</i>
Env:Sender ter:InvalidArgValue ter:NoPTZProfile	<i>The requested profile token does not reference a PTZ configuration.</i>
Env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>

## 5.7 Predefined PTZ spaces

Spaces are used to specify absolute, relative and continuous movements. Whereas absolute movements require an absolute position, relative movements are specified by a position translation. Continuous movements require the specification of a velocity (relative movement over time). For these three cases, different coordinate systems are used describing the desired movement. The generic spaces do not absolutely specify the underlying PTZ model, so that it can be applied to any PTZ hardware. Additional spaces are defined in the document *ONVIF PTZ Coordinate Spaces* white paper.

### 5.7.1 Absolute Position Spaces

#### 5.7.1.1 Generic Pan/Tilt Position Space

The Generic Pan/Tilt Position space shall be provided by every PTZ node that supports absolute Pan/Tilt, since it does not relate to a specific physical range. Instead, the range should be defined as the full range of the PTZ unit normalized to the range -1 to 1 resulting in the following space description:

```
<tt:AbsolutePanTiltPositionSpace>
  <tt:SpaceURI>
    http://www.onvif.org/ver10/tptz/PanTiltSpaces/PositionGenericSpace
  </tt:SpaceURI>
  <tt:Xrange>
    <tt:Min>-1.0</tt:Min>
    <tt:Max>1.0</tt:Max>
  </tt:Xrange>
  <tt:Yrange>
    <tt:Min>-1.0</tt:Min>
    <tt:Max>1.0</tt:Max>
  </tt:Yrange>
</tt:AbsolutePanTiltPositionSpace>
```

#### 5.7.1.2 Generic Zoom Position Space

The Generic Zoom Position Space shall be provided by every PTZ node that supports absolute Zoom, since it does not relate to a specific physical range. Instead, the range should be defined as the full range of the Zoom normalized to the range 0 (wide) to 1 (tele). There is no assumption about how the generic zoom range is mapped to magnification, FOV or other physical zoom dimension. This results in the following space description:

```
<tt:AbsoluteZoomPositionSpace>
  <tt:SpaceURI>
    http://www.onvif.org/ver10/tptz/ZoomSpaces/PositionGenericSpace
  </tt:SpaceURI>
  <tt:Xrange>
    <tt:Min>0.0</tt:Min>
    <tt:Max>1.0</tt:Max>
  </tt:Xrange>
</tt:AbsoluteZoomPositionSpace>
```

## 5.7.2 Relative Translation Spaces

A Relative Pan/Tilt Translation Space moves the PTZ unit a certain translation in a certain direction without knowing the camera's current Pan/Tilt position.

### 5.7.2.1 Generic Pan/Tilt Translation Space

The Generic Pan/Tilt translation space shall be provided by every PTZ node that supports relative Pan/Tilt, since it does not relate to a specific physical range. Instead, the range should be defined as the full positive and negative translation range of the PTZ unit normalized to the range -1 to 1, where positive translation would mean clockwise rotation or movement in right/up direction resulting in the following space description:

```
<tt:RelativePanTiltTranslationSpace>
  <tt:SpaceURI>
http://www.onvif.org/ver10/tptz/PanTiltSpaces/TranslationGenericSpace
  </tt:SpaceURI>
  <tt:Xrange>
    <tt:Min>-1.0</tt:Min>
    <tt:Max>1.0</tt:Max>
  </tt:Xrange>
  <tt:Yrange>
    <tt:Min>-1.0</tt:Min>
    <tt:Max>1.0</tt:Max>
  </tt:Yrange>
</tt:RelativePanTiltTranslationSpace>
```

### 5.7.2.2 Generic Zoom Translation Space

The Generic Zoom Translation Space shall be provided by every PTZ node that supports relative Zoom, since it does not relate to a specific physical range. Instead, the corresponding absolute range should be defined as the full positive and negative translation range of the Zoom normalized to the range -1 to 1, where a positive translation maps to a movement in TELE direction. The translation is signed to indicate direction (negative is to wide, positive is to tele). There is no assumption about how the generic zoom range is mapped to magnification, FOV or other physical zoom dimension. This results in the following space description:

```
<tt:RelativeZoomTranslationSpace>
  <tt:SpaceURI>
http://www.onvif.org/ver10/tptz/ZoomSpaces/TranslationGenericSpace
  </tt:SpaceURI>
  <tt:Xrange>
    <tt:Min>-1.0</tt:Min>
    <tt:Max>1.0</tt:Max>
  </tt:Xrange>
</tt:RelativeZoomTranslationSpace>
```

## 5.7.3 Continuous Velocity Spaces

The continuous velocity spaces are used to continuously move the PTZ unit in a certain direction.

### 5.7.3.1 Generic Pan/Tilt Velocity Space

The generic Pan/Tilt velocity space shall be provided by every PTZ node, since it does not relate to a specific physical range. Instead, the range should be defined as a range of the PTZ unit's speed normalized to the range -1 to 1, where a positive velocity would map to clockwise rotation or movement in the right/up direction. A signed speed can be independently specified for the pan and tilt component resulting in the following space description:

```
<tt:ContinuousPanTiltVelocitySpace>
  <tt:SpaceURI>
    http://www.onvif.org/ver10/tptz/PanTiltSpaces/VelocityGenericSpace
  </tt:SpaceURI>
  <tt:Xrange>
    <tt:Min>-1.0</tt:Min>
    <tt:Max>1.0</tt:Max>
  </tt:Xrange>
  <tt:Yrange>
    <tt:Min>-1.0</tt:Min>
    <tt:Max>1.0</tt:Max>
  </tt:Yrange>
</tt:ContinuousPanTiltVelocitySpace>
```

### 5.7.3.2 Generic Zoom Velocity Space

The generic zoom velocity space specifies a zoom factor velocity without knowing the underlying physical model. The range should be normalized from -1 to 1, where a positive velocity would map to TELE direction. A generic zoom velocity space description resembles the following:

```
<tt:ContinuousZoomVelocitySpace>
  <tt:SpaceURI>
    http://www.onvif.org/ver10/tptz/ZoomSpaces/VelocityGenericSpace
  </tt:SpaceURI>
  <tt:Xrange>
    <tt:Min>-1.0</tt:Min>
    <tt:Max>1.0</tt:Max>
  </tt:Xrange>
</tt:ContinuousZoomVelocitySpace>
```

## 5.7.4 Speed Spaces

The speed spaces specify the speed for a Pan/Tilt and Zoom movement when moving to an absolute position or to a relative translation. In contrast to the velocity spaces, speed spaces do not contain any directional information. The speed of a combined Pan/Tilt movement is represented by a single non-negative scalar value.

### 5.7.4.1 Generic Pan/Tilt Speed Space

The generic Pan/Tilt speed space shall be provided by every PTZ node that supports configurable speed for Pan/Tilt, since it does not relate to a specific physical range. Instead, the range should be defined as the full range of the speed range normalized to the range 0 (stopped) to 1 (full speed). This results in the following space description:

```
<tt:PanTiltSpeedSpace>
  <tt:SpaceURI>
    http://www.onvif.org/ver10/tptz/PanTiltSpaces/GenericSpeedSpace
  </tt:SpaceURI>
  <tt:Xrange>
    <tt:Min>0.0</tt:Min>
    <tt:Max>1.0</tt:Max>
  </tt:Xrange>
</tt:PanTiltSpeedSpace>
```

### 5.7.4.2 Generic Zoom Speed Space

The generic zoom speed space shall be provided by every PTZ node that supports configurable speed for Zoom, since it does not relate to a specific physical range. Instead, the range should be defined as the full range of the speed range normalized to the range 0 (stopped) to 1 (full speed). This results in the following space description:

```
<tt:ZoomSpeedSpace>
  <tt:SpaceURI>
    http://www.onvif.org/ver10/tptz/ZoomSpaces/ZoomGenericSpeedSpace
  </tt:SpaceURI>
  <tt:Xrange>
    <tt:Min>0.0</tt:Min>
    <tt:Max>1.0</tt:Max>
  </tt:Xrange>
</tt:ZoomSpeedSpace>
```

## 5.8 Preset Tour Operations

Preset Tour is a feature for PTZ-capable devices, enabling the PTZ unit to move on specified presets sequentially at some interval.

This section describes operations that manage the preset tours. These operations shall be implemented when a PTZ node in the PTZ Service indicates support of Preset Tour with `MaximumNumberOfPresetTours>0` capability value. All operations require a *ProfileToken* referencing a Media Profile including a PTZConfiguration. All operations for preset tours shall be always persistent.

PresetTours can have forward and backward directions, and in case direction is omitted, it is assumed to be forward. However, it is possible to specify random execution by setting the RandomPresetOrder attribute. In case RandomPresetOrder is set to true and Direction is also present, Direction will be ignored and presets of the Tour will be recalled randomly.

### 5.8.1 GetPresetTours

A device supporting Preset Tour feature shall return all available Preset Tours through the GetPresetTours.

**Table 21: GetPresetTours command**

<b>GetPresetTours</b>		Access Class: READ_MEDIA
<b>Message name</b>	<b>Description</b>	
GetPresetToursRequest	<p><i>The request message specifies the ProfileToken for which PresetTours should be reported.</i></p> <p>tt:ReferenceToken <b>ProfileToken</b> [1][1]</p>	
GetPresetToursResponse	<p><i>The response contains all existing PresetTours on the device.</i></p> <p>tt:PresetTour <b>PresetTour</b> [0][unbounded]</p>	
<b>Fault codes</b>	<b>Description</b>	
env:Sender ter:InvalidArgVal ter>NoProfile	<i>The requested profile token ProfileToken does not exist</i>	
env:Sender ter:InvalidArgVal ter>NoPTZConfiguration	<i>The requested profile token does not reference a PTZ configuration.</i>	

env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>
--	------------------------------

### 5.8.2 GetPresetTour

A device supporting Preset Tour shall return the requested Preset Tour through the GetPresetTour.

**Table 22: GetPresetTour command**

<b>GetPresetTour</b>		Access Class: READ_MEDIA
<b>Message name</b>	<b>Description</b>	
GetPresetTourRequest	<p><i>The request message specifies the ProfileToken and PresetTourToken for which the PresetTour should be reported</i></p> <p>tt:ReferenceToken <b>ProfileToken</b> [1][1] tt:ReferenceToken <b>PresetTourToken</b>[1][1]</p>	
GetPresetTourResponse	<p><i>The response contains the requested PresetTour in the media profile</i></p> <p>tt:PresetTour <b>PresetTour</b> [1][1]</p>	
<b>Fault codes</b>	<b>Description</b>	
env:Sender ter:InvalidArgVal ter.NoProfile	<i>The requested profile token ProfileToken does not exist</i>	
env:Sender ter:InvalidArgVal ter.NoToken	<i>The requested PresetTourToken does not exist.</i>	
env:Sender ter:InvalidArgVal ter>NoPTZConfiguration	<i>The requested profile token does not reference a PTZ configuration.</i>	
env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>	

### 5.8.3 GetPresetTourOptions

A device supporting Preset Tour shall provide options how Preset Tours can be configured through the GetPresetTourOptions.

**Table 23: GetPresetTourOptions command**

<b>GetPresetTourOptions</b>		Access Class: READ_MEDIA
<b>Message name</b>	<b>Description</b>	
GetPresetTourOptionsRequest	<p><i>The request message specifies the ProfileToken for how the preset tours can be configured. The PresetTourToken does not affect to the response.</i></p> <p>tt:ReferenceToken <b>ProfileToken</b> [1][1] tt:ReferenceToken <b>PresetTourToken</b> [0][1]</p>	

GetPresetTourOptionsResponse	<i>This message contains the PTZ preset tour options.</i>  tt:PTZPresetTourOptions <b>Options[1][1]</b>
<b>Fault codes</b>	<b>Description</b>
env:Sender ter:InvalidArgVal ter>NoProfile	<i>The requested profile token ProfileToken does not exist</i>
env:Sender ter:InvalidArgVal ter>NoPTZConfiguration	<i>The requested profile does not reference a PTZ configuration.</i>
env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>

#### 5.8.4 CreatePresetTour

A device supporting Preset Tour feature shall allow creating a new Preset Tour through the CreatePresetTour.

**Table 24: CreatePresetTour command**

<b>CreatePresetTour</b>		Access Class: ACTUATE
<b>Message name</b>	<b>Description</b>	
CreatePresetTour Request	<i>The request message specifies the ProfileToken to which a new PresetTour should be added</i>  tt:ReferenceToken <b>ProfileToken [1][1]</b>	
CreatePresetTour Response	<i>This message contains a PresetTourToken</i>  tt:ReferenceToken <b>PresetTourToken[1][1]</b>	
<b>Fault codes</b>	<b>Description</b>	
env:Sender ter:InvalidArgVal ter:TooManyPresetTours	<i>There is not enough space in the device to create the new preset tour to the profile</i>	
env:Sender ter:InvalidArgVal ter>NoProfile	<i>The requested profile token ProfileToken does not exist</i>	
env:Sender ter:InvalidArgVal ter>NoPTZConfiguration	<i>The requested profile does not reference a PTZ configuration.</i>	
env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>	

#### 5.8.5 ModifyPresetTour

A device supporting PresetTour feature shall allow modifying the PresetTour through the ModifyPresetTour.

**Table 25: ModifyPresetTour command**

<b>ModifyPresetTour</b>		Access Class: ACTUATE
<b>Message name</b>	<b>Description</b>	
ModifyPresetTour Request	<p><i>The request message specifies the ProfileToken to which the existing PresetTour should be modified.</i></p> <p>tt:ReferenceToken <b>ProfileToken</b> [1][1] tt:PresetTour <b>PresetTour</b>[1][1]</p>	
ModifyPresetTour Response	<i>This is an empty message.</i>	
<b>Fault codes</b>	<b>Description</b>	
env:Sender ter:InvalidArgVal ter:InvalidPresetTour	<i>The requested PresetTour includes invalid parameter(s)</i>	
env: Receiver ter: InvalidArgVal ter:TooManyPresets	<i>Too many TourSpots are included in the PresetTour</i>	
env:Sender ter:InvalidArgVal ter:SpaceNotSupported	<i>A space is referenced in an argument which is not supported by the PTZ Node</i>	
env:Sender ter:InvalidArgVal ter:NoToken	<i>The requested PresetTourToken does not exist.</i>	
env:Sender ter:InvalidArgVal ter>NoProfile	<i>The requested profile token ProfileToken does not exist</i>	
env:Sender ter:InvalidArgVal ter:NoPTZConfiguration	<i>The requested profile token does not reference a PTZ configuration.</i>	
env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>	

### 5.8.6 OperatePresetTour

A device supporting Preset Tour feature shall allow starting, stopping, or pausing a Preset Tour through the OperatePresetTour.

Preset tour can be operated with the *PresetTourOperation* parameter of OperatePresetTour command.

- Start: Indicates starting the preset tour or re-starting the paused preset tour.
- Stop: Indicates stopping the preset tour.
- Pause: Indicates pausing the preset tour.

Receiving another OperatePresetTour command of Start operation for the Preset Tour which have been already started, the Preset Tour shall be restarted with the newly requested parameter.

**Table 26: OperatePresetTour command**

<b>OperatePresetTour</b>		Access Class: ACTUATE
<b>Message name</b>	<b>Description</b>	
OperatePresetTour Request	<p><i>The request message specifies the ProfileToken to which the PresetTour should be operated.</i></p> <p>tt:ReferenceToken <b>ProfileToken</b> [1][1]            tt:ReferenceToken <b>PresetTourToken</b>[1][1]            tt:PTZPresetTourOperation <b>Operation</b>[1][1]</p>	
OperatePresetTour Response	<i>This is an empty message.</i>	
<b>Fault codes</b>	<b>Description</b>	
env:Sender ter:InvalidArgVal ter.InvalidPresetTour	<i>The requested PresetTour includes invalid parameter(s)</i>	
env:Sender ter:InvalidArgVal ter:NoToken	<i>The requested PresetTourToken does not exist.</i>	
env:Sender ter:InvalidArgVal ter.NoProfile	<i>The requested profile token ProfileToken does not exist</i>	
env: Receiver ter: InvalidArgVal ter:ActivationFailed	<i>The requested preset tour cannot be activated while PTZ unit is moving or another preset tour is now activated.</i>	
env:Sender ter:InvalidArgVal ter>NoPTZConfiguration	<i>The requested profile token does not reference a PTZ configuration.</i>	
env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>	

### 5.8.7 RemovePresetTour

A device supporting Preset Tour shall remove the requested Preset Tour through the RemovePresetTour.

**Table 27: RemovePresetTour command**

<b>RemovePresetTour</b>		Access Class: ACTUATE
<b>Message name</b>	<b>Description</b>	
RemovePresetTourRequest	<p><i>The request message specifies the ProfileToken and PresetTour token for which the preset Tour should be removed</i></p> <p>tt:ReferenceToken <b>ProfileToken</b> [1][1]            tt:ReferenceToken <b>PresetTourToken</b>[1][1]</p>	
RemovePresetTourResponse	<i>This is an empty message.</i>	
<b>Fault codes</b>	<b>Description</b>	
env:Sender ter:InvalidArgVal	<i>The requested preset tour token does not exist.</i>	

ter:NoToken	
env:Sender ter:InvalidArgVal ter:NoProfile	<i>The requested profile token ProfileToken does not exist</i>
env:Sender ter:InvalidArgVal ter:NoPTZConfiguration	<i>The requested profile token does not reference a PTZ configuration.</i>
env: Receiver ter:ActionNotSupported ter:PTZNotSupported	<i>PTZ is not supported.</i>

### 5.8.8 Preset Tour parameters

Preset Tour is composed of following parameters:

**PresetTour:** Configuration of a preset tour.

- Name: Name of the preset tour [Optional]
- Status: Indicates the current status of the preset tour. This parameter in the argument of ModifyPresetTour command shall be ignored.
  - Idle: Preset tour is not activated.
  - Touring: Preset tour is activated and now under touring.
  - Paused: Preset tour is under pause at the middle of the tour by client. This status requires Start operation from a client to re-start.
- AutoStart: Flag to enable the preset tour activated always. When this flag in one of preset tours is configured as True, ones in all other preset tours referring the same PTZNode shall be maintained to false. Starting and stopping the preset tour by OperatePresetTour shall change this flag to False. Pausing and resuming the preset tour by OperatePresetTour shall not change this flag.
- TourSpot: Presets with its configuration for touring [Optional]
  - PresetDetail: Detail configuration of the preset for the tour spot. One out of below three options shall be chosen.
    - PresetToken: Specifies an existing PresetToken as this tour spot.
    - Home: Specifies the home position as the tour spot. Only “True” to this Boolean parameter shall be valid. “False” shall be treated as an error due to an invalid argument.
    - PTZPosition: Specifies the vector of PTZ Node as the tour spot
  - Speed: PTZ speed moving to this tour spot. [Optional]
  - StayTime: Time duration of stay on the spot. [Optional]
- PresetTourStartingCondition: Configuration of the starting preset tour.

- RecurringTime: Parameter to specify how many times the preset tour is recurred. [Optional]
- RecurringDuration: Parameter to specify how long duration time the preset tour is recurred [Optional]
  - In case the both conditions RecurringTime and RecurringDuration are configured, the preset tour shall finish with one of conditions satisfied earlier. In case the both are omitted, PresetTour shall be recurred without limitation.
- PresetTourDirection: A device refers this flag to choose which direction the preset tour goes. It is ommissible parameter and Forward shall be chosen in case it is omitted. [Optional]
  - Forward: Preset tour goes in forward order.
  - Backward: Preset tour goes in backward order.
- Token: Unique identifier of the preset tour

## 5.9 PT Control Direction Configuration

PT Control Direction Configuration is one set of parameters in PTZ configuration used to configure the movement directions of PT(Pan and Tilt) in following two ways:


### 1. E-Flip

E-Flip is flipping of the control directions of PT when the lens passes nadir or zenith direction during a tilt movement. This functionality is useful when controlling domes using human joystick control, where a client can track an object that passes nadir and doesn't have to bother about inverted controls.


### 2. Reverse

Reverse parameter is for switching positive and negative of the PT control direction. This feature can be used to configure appropriate control direction of PT based on directions that the device is mounted, for example, in the ceiling downwards or on the surface upwards.


Figure 1 shows an example how the control directions of PT are changed by E-Flip feature and Reverse feature.

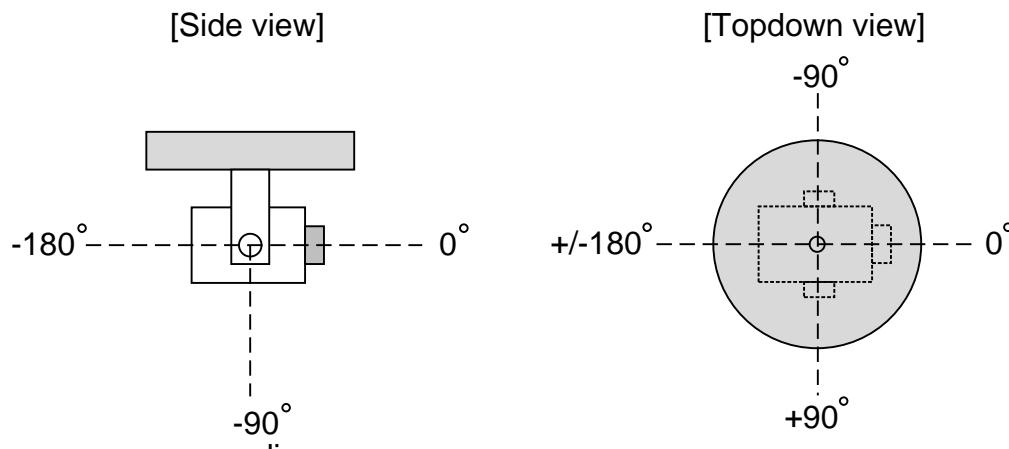


(a-1) Normal PT control direction

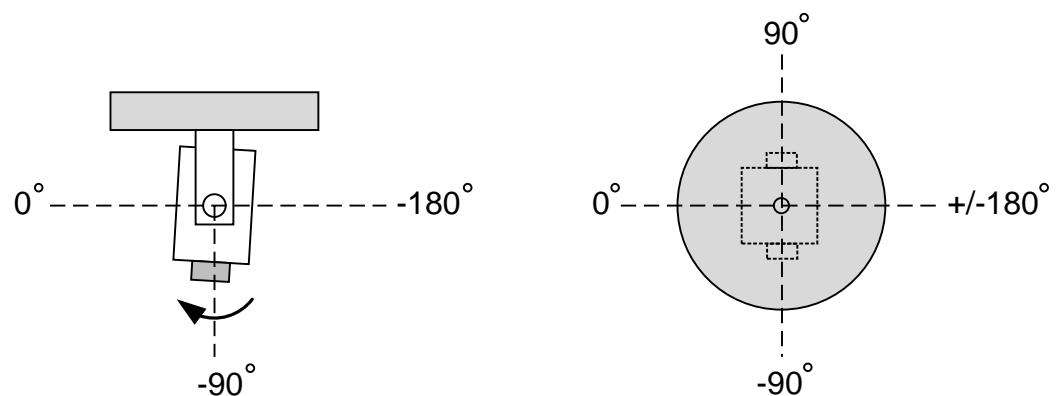

(a-2) Normal PT control direction with E-Flip activated

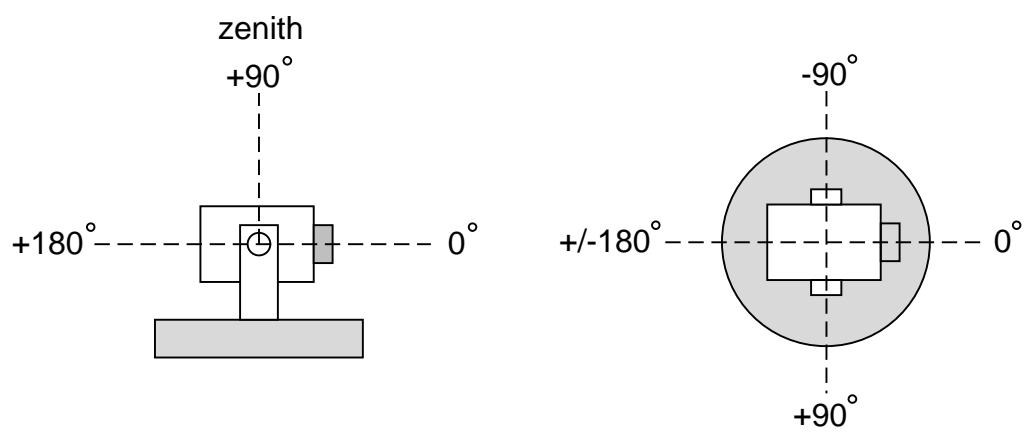

(b-1) Reversed PT control direction

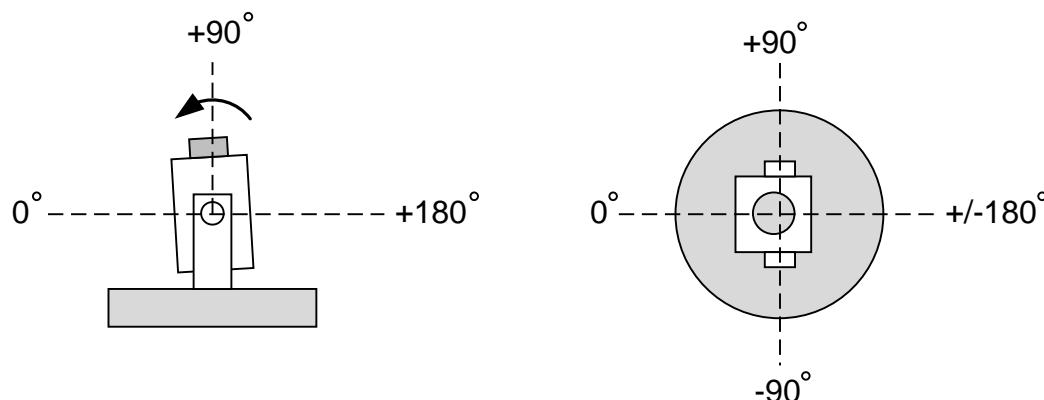

(b-2) Reversed PT control direction with E-Flip activated

**Figure 1: Example of changes of PT Control Direction by E-Flip and Reverse**

In case the control direction of PT is changed by PT Control Direction Configuration, it is recommended that direction of the video image is also changed by Rotation Configuration in Video Source Configuration as well to match the both directions of PT and video stream.

## 5.10 Capabilities

The capabilities reflect optional functions and functionality of a service. The information is static and does not change during device operation. The following capabilities are available:

- EFlip:** Indicates whether or not E-Flip is supported.
- Reverse:** Indicates whether or not reversing of PT control direction is supported.
- GetCompatibleConfigurations:** Indicates the support for GetCompatibleConfigurations command.
- MoveStatus** Indicates that the PTZVector includes MoveStatus information.
- StatusPosition** Indicates that the PTZVector includes Position information.

**Table 28: GetServiceCapabilities command**

<b>GetServiceCapabilities</b>		Access Class: PRE_AUTH
Message name	Description	
GetServiceCapabilitiesRequest	<i>This is an empty message.</i>	
GetServiceCapabilitiesResponse	<i>The capability response message contains the requested service capabilities using a hierarchical XML capability structure.</i>  tptz:Capabilities <b>Capabilities</b> [1][1]	
Fault codes		Description

	<i>No command specific faults!</i>
--	------------------------------------

## 5.11 Service specific data types

### 5.11.1 PTZNode

```
<xs:complexType name="PTZNode">
  <xs:complexContent>
    <xs:extension base="tt:DeviceEntity">
      <xs:sequence>
        <xs:element name="Name" type="tt:Name" minOccurs="0"/>
        <xs:element name="SupportedPTZSpaces" type="tt:PTZSpaces"/>
        <xs:element name="MaximumNumberOfPresets" type="xs:int"/>
        <xs:element name="HomeSupported" type="xs:boolean"/>
        <xs:element name="AuxiliaryCommands" type="tt:AuxiliaryData"
minOccurs="0" maxOccurs="unbounded"/>
        <xs:element name="Extension" type="tt:PTZNodeExtension"
minOccurs="0"/>
      </xs:sequence>
      <xs:attribute name="FixedHomePosition" type="xs:boolean">
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

- **Name**  
A unique identifier that is used to reference PTZ nodes.
- **SupportedPTZSpaces**  
A list of coordinate systems available for the PTZ node. For each coordinate system, the PTZ node MUST specify its allowed range.
- **MaximumNumberOfPresets**  
All preset operations MUST be available for this PTZ node if one preset is supported.
- **HomeSupported**  
A boolean operator specifying the availability of a home position. If set to true, the home position operations MUST be available for this PTZ node.
- **AuxiliaryCommands**  
A list of supported auxiliary commands. If the list is not empty, the auxiliary operations MUST be available for this PTZ node.
- **FixedHomePosition** Indication whether the HomePosition of a Node is fixed or it can be changed via the SetHomePosition command.

### 5.11.2 PTZNodeExtension

```
<xs:complexType name="PTZNodeExtension">
  <xs:sequence>
    <xs:element name="SupportedPresetTour" type="tt:
PTZPresetTourSupported" minOccurs="0" maxOccurs="unbounded"/>
  </xs:sequence>
```

```
</xs:complexType>
```

- **SupportedPresetTour**  
Detail of supported Preset Tour feature.

### 5.11.3 PTZPresetTourSupported

```
<xs:complexType name="PTZPresetTourSupported">
  <xs:sequence>
    <xs:element name="MaximumNumberOfPresetTours" type="xs:int">
    <xs:element name="PTZPresetTourOperation"
      type="tt:PTZPresetTourOperation" minOccurs="0"
      maxOccurs="unbounded">
  </xs:sequence>
</xs:complexType>
```

- **MaximumNumberOfPresetTours**  
Indicates number of preset tours that can be created. Required preset tour operations shall be available for this PTZ Node if one or more preset tour is supported.
- **PTZPresetTourOperation**  
Indicates which preset tour operations are available for this PTZ Node.

### 5.11.4 PTZConfiguration

```
<xs:complexType name="PTZConfiguration">
  <xs:complexContent>
    <xs:extension base="tt:ConfigurationEntity">
      <xs:sequence>
        <xs:element name="NodeToken" type="tt:ReferenceToken"/>
        <xs:element name="DefaultAbsolutePanTiltPositionSpace"
          type="xs:anyURI" minOccurs="0"/>
        <xs:element name="DefaultAbsoluteZoomPositionSpace"
          type="xs:anyURI" minOccurs="0"/>
        <xs:element name="DefaultRelativePanTiltTranslationSpace"
          type="xs:anyURI" minOccurs="0"/>
        <xs:element name="DefaultRelativeZoomTranslationSpace"
          type="xs:anyURI" minOccurs="0"/>
        <xs:element name="DefaultContinuousPanTiltVelocitySpace"
          type="xs:anyURI" minOccurs="0"/>
        <xs:element name="DefaultContinuousZoomVelocitySpace"
          type="xs:anyURI" minOccurs="0"/>
        <xs:element name="DefaultPTZSpeed" type="tt:PTZSpeed"
          minOccurs="0"/>
        <xs:element name="DefaultPTZTimeout" type="xs:duration"
          minOccurs="0"/>
        <xs:element name="PanTiltLimits" type="tt:PanTiltLimits"
          minOccurs="0"/>
        <xs:element name="ZoomLimits" type="tt:ZoomLimits"
          minOccurs="0"/>
        <xs:element name="Extension" type="tt:PTZConfigurationExtension"
          minOccurs="0"/>
      </xs:sequence>
      <xs:attribute name="MoveRamp" type="xs:int" />
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

```
<xs:attribute name="PresetRamp" type="xs:int" />
<xs:attribute name="PresetTourRamp" type="xs:int" />
</xs:extension>
</xs:complexContent>
</xs:complexType>
```

- **NodeToken**  
A mandatory reference to the PTZ node that the PTZ configuration belongs to.
- **DefaultAbsolutePanTiltPositionSpace**  
If the PTZ node supports absolute Pan/Tilt movements, it shall specify one absolute Pan/Tilt position space as default.
- **DefaultAbsoluteZoomPositionSpace**  
If the PTZ node supports absolute zoom movements, it shall specify one absolute zoom position space as default.
- **DefaultRelativePanTiltTranslationSpace**  
If the PTZ node supports relative Pan/Tilt movements, it shall specify one relative Pan/Tilt translation space as default.
- **DefaultRelativeZoomTranslationSpace**  
If the PTZ node supports relative zoom movements, it shall specify one relative zoom translation space as default.
- **DefaultContinuousPanTiltVelocitySpace**  
If the PTZ node supports continuous Pan/Tilt movements, it shall specify one continuous Pan/Tilt velocity space as default.
- **DefaultContinuousZoomVelocitySpace**  
If the PTZ node supports continuous zoom movements, it shall specify one continuous zoom velocity space as default.
- **DefaultPTZSpeed**  
If the PTZ node supports absolute or relative PTZ movements, it shall specify corresponding default Pan/Tilt and Zoom speeds.
- **DefaultPTZTimeout**  
If the PTZ node supports continuous movements, it shall specify a default timeout, after which the movement stops.
- **PanTiltLimits**  
The Pan/Tilt limits element should be present for a PTZ node that supports an absolute Pan/Tilt. If the element is present it signals the support for configurable Pan/Tilt limits. If limits are enabled, the Pan/Tilt movements shall always stay within the specified range. The Pan/Tilt limits are disabled by setting the limits to -INF or +INF.
- **ZoomLimits**  
The Zoom limits element should be present for a PTZ node that supports absolute zoom. If the element is present it signals the supports for configurable zoom limits. If limits are enabled the zoom movements shall always stay within the specified range. The zoom limits are disabled by settings the limits to -INF and +INF.
- **MoveRamp**  
The optional acceleration ramp used by the device when moving..
- **PresetRamp**  
The optional acceleration ramp used by the device when recalling presets.
- **PresetTourRamp**  
The optional acceleration ramp used by the device when executing PresetTours.

## 5.11.5 PTZConfigurationExtension

```
<xs:complexType name="PTZConfigurationExtension">
  <xs:sequence>
    <xs:element name="PTControlDirection" type="tt:PTControlDirection"
      minOccurs="0" />
  </xs:sequence>
</xs:complexType>
```

- **PTControlDirection**  
Optional element to configure PT Control Direction related features

## 5.11.6 PTControlDirection

```
<xs:complexType name="PTControlDirection">
  <xs:sequence>
    <xs:element name="EFlip" type="tt:EFlip" minOccurs="0" />
    <xs:element name="Reverse" type="tt:Reverse" minOccurs="0" />
  </xs:sequence>
</xs:complexType>
```

- **EFlip**  
Optional element to configure related parameters for E-Flip.
- **Reverse**  
Optional element to configure related parameters for reversing of PT Control Direction.

## 5.11.7 EFlip

```
<xs:complexType name="EFlip">
  <xs:sequence>
    <xs:element name="Mode" type="tt:EFlipMode" minOccurs="0" />
  </xs:sequence>
</xs:complexType>
```

- **Mode**  
Parameter to enable/disable E-Flip feature.

## 5.11.8 Reverse

```
<xs:complexType name="Reverse">
  <xs:sequence>
    <xs:element name="Mode" type="tt:ReverseMode" minOccurs="0" />
  </xs:sequence>
</xs:complexType>
```

- **Mode**  
Parameter to enable/disable Reverse feature.

## 5.11.9 PTZConfigurationOptions

```
<xs:complexType name="PTZConfigurationOptions">
  <xs:sequence>
```

```

<xs:element name="Spaces" type="tt:PTZSpaces"/>
<xs:element name="PTZTimeout" type="tt:DurationRange"/>
<xs:element name="PTControlDirection"
            type="tt:PTControlDirectionOptions" minOccurs="0">
</xs:sequence>
<xs:attribute name="PTZRamps" type="tt:IntAttrList"/>
</xs:complexType>

```

- **Spaces**  
A list of supported coordinate systems including their range limitations.
- **PTZTimeout**  
A timeout range within which timeouts are accepted by the PTZ node.
- **PTControlDirection**  
Supported options for PT Direction Control.
- **PTZRamps**  
The list of acceleration ramps supported by the device. The smallest acceleration value corresponds to the minimal index, the highest acceleration corresponds to the maximum index.

### 5.11.10 PTControlDirectionOptions

```

<xs:complexType name="PTControlDirectionOptions">
  <xs:sequence>
    <xs:element name="EFlip" type="tt:EFlipOptions" minOccurs="0"/>
    <xs:element name="Reverse" type="tt:ReverseOptions" minOccurs="0"/>
  </xs:sequence>
</xs:complexType>

```

- **EFlip**  
Supported options for E-Flip feature.
- **Reverse**  
Supported options for Reverse feature.
- 

### 5.11.11 PanTiltLimits

```

<xs:complexType name="PanTiltLimits">
  <xs:sequence>
    <xs:element name="Range" type="tt:Space2Ddescription"/>
  </xs:sequence>
</xs:complexType>

```

- **Range**  
A range of pan tilt limits..

### 5.11.12 ZoomLimits

```

<xs:complexType name="ZoomLimits">
  <xs:sequence>

```

```

<xs:element name="Range" type="tt:Space1Ddescription" />
</xs:sequence>
</xs:complexType>
```

- **Range**  
A range of zoom limits..

### 5.11.13 PTZSpaces

```

<xs:complexType name="PTZSpaces">
<xs:sequence>
    <xs:element name="AbsolutePanTiltPositionSpace"
        type="tt:Space2Ddescription" minOccurs="0"
        maxOccurs="unbounded"/>
    <xs:element name="AbsoluteZoomPositionSpace"
        type="tt:Space1Ddescription" minOccurs="0"
        maxOccurs="unbounded"/>
    <xs:element name="RelativePanTiltTranslationSpace"
        type="tt:Space2Ddescription" minOccurs="0"
        maxOccurs="unbounded"/>
    <xs:element name="RelativeZoomTranslationSpace"
        type="tt:Space1Ddescription" minOccurs="0"
        maxOccurs="unbounded"/>
    <xs:element name="ContinuousPanTiltVelocitySpace"
        type="tt:Space2Ddescription" minOccurs="0"
        maxOccurs="unbounded"/>
    <xs:element name="ContinuousZoomVelocitySpace"
        type="tt:Space1Ddescription" minOccurs="0"
        maxOccurs="unbounded"/>
    <xs:element name="PanTiltSpeedSpace" type="tt:Space1Ddescription"
        minOccurs="0" maxOccurs="unbounded"/>
    <xs:element name="ZoomSpeedSpace" type="tt:Space1Ddescription"
        minOccurs="0" maxOccurs="unbounded"/>
</xs:sequence>
</xs:complexType>
```

- **AbsolutePanTiltPositionSpace**  
A coordinate systems of absolute pan tilt position.
- **AbsoluteZoomPositionSpace**  
A coordinate systems of absolute zoom position.
- **RelativePanTiltTranslationSpace**  
A coordinate systems of relative pan tilt position.
- **RelativeZoomTranslationSpace**  
A coordinate systems of relative zoom position.
- **ContinuousPanTiltVelocitySpace**  
A coordinate systems of continuous pan tilt velocity.
- **ContinuousZoomVelocitySpace**  
A coordinate systems of continuous zoom velocity.
- **PanTiltSpeedSpace**  
A coordinate systems of continuous pan tilt speed.
- **ZoomSpeedSpace**  
A coordinate systems of continuous zoom speed.

### 5.11.14 Space2Ddescription

```
<xs:complexType name="Space2Ddescription">
  <xs:sequence>
    <xs:element name="URI" type="xs:anyURI" />
    <xs:element name="Xrange" type="tt:FloatRange" />
    <xs:element name="Yrange" type="tt:FloatRange" />
  </xs:sequence>
</xs:complexType>
```

- **URI**  
A URI of coordinate systems.
- **Xrange**  
A range of x-axis.
- **Yrange**  
A range of y-axis.

### 5.11.15 Space1Ddescription

```
<xs:complexType name="Space1Ddescription">
  <xs:sequence>
    <xs:element name="URI" type="xs:anyURI" />
    <xs:element name="Xrange" type="tt:FloatRange" />
  </xs:sequence>
</xs:complexType>
```

- **URI**  
A URI of coordinate systems.
- **Xrange**  
A range of x-axis.

### 5.11.16 Vector2D

```
<xs:complexType name="Vector2D">
  <xs:attribute name="x" type="xs:float" use="required" />
  <xs:attribute name="y" type="xs:float" use="required" />
  <xs:attribute name="space" type="xs:anyURI" use="optional" />
</xs:complexType>
```

- **x**  
The x component corresponds to pan.
- **y**  
The y component corresponds to tilt.
- **space**  
Pan/tilt coordinate space selector. The following options are defined:
  - <http://www.onvif.org/ver10/tptz/PanTiltSpaces/PositionGenericSpace>
  - <http://www.onvif.org/ver10/tptz/PanTiltSpaces/TranslationGenericSpace>

- <http://www.onvif.org/ver10/tptz/PanTiltSpaces/VelocityGenericSpace>
- <http://www.onvif.org/ver10/tptz/PanTiltSpaces/GenericSpeedSpace>

### 5.11.17 Vector1D

```
<xs:complexType name="Vector1D">
  <xs:attribute name="x" type="xs:float" use="required"/>
  <xs:attribute name="space" type="xs:anyURI" use="optional"/>
</xs:complexType>
```

- **x**  
The x component corresponds to pan.
- **space**  
Pan/tilt coordinate space selector. The following options are defined:
  - <http://www.onvif.org/ver10/tptz/PanTiltSpaces/PositionGenericSpace>
  - <http://www.onvif.org/ver10/tptz/PanTiltSpaces/TranslationGenericSpace>
  - <http://www.onvif.org/ver10/tptz/PanTiltSpaces/VelocityGenericSpace>
  - <http://www.onvif.org/ver10/tptz/PanTiltSpaces/GenericSpeedSpace>

### 5.11.18 PTZVector

```
<xs:complexType name="PTZVector">
  <xs:sequence>
    <xs:element name="PanTilt" type="tt:Vector2D" minOccurs="0"/>
    <xs:element name="Zoom" type="tt:Vector1D" minOccurs="0"/>
  </xs:sequence>
</xs:complexType>
```

- **PanTilt**  
Pan and tilt position. The x component corresponds to pan and the y component to tilt.
- **Zoom**  
A zoom position.

### 5.11.19 PTZSpeed

```
<xs:complexType name="PTZSpeed">
  <xs:sequence>
    <xs:element name="PanTilt" type="tt:Vector2D" minOccurs="0"/>
    <xs:element name="Zoom" type="tt:Vector1D" minOccurs="0"/>
  </xs:sequence>
</xs:complexType>
```

- **PanTilt**  
Pan and tilt speed. The x component corresponds to pan and the y component to tilt.
- **Zoom**  
A zoom speed.

### 5.11.20 PTZStatus

```
<xs:complexType name="PTZStatus">
  <xs:sequence>
    <xs:element name="Position" type="tt:PTZVector" minOccurs="0"/>
    <xs:element name="MoveStatus" type="tt:PTZMoveStatus" minOccurs="0"/>
    <xs:element name="Error" type="xs:string" minOccurs="0"/>
    <xs:element name="UtcTime" type="xs:dateTime"/>
  </xs:sequence>
</xs:complexType>
```

- **Position**  
Specifies the absolute position of the PTZ unit together with the space references. The default absolute spaces of the corresponding PTZ configuration MUST be referenced within the Position element.
- **MoveStatus**  
Indicates if the Pan/Tilt/Zoom device unit is currently moving, idle or in an unknown state.
- **Error**  
States a current PTZ error.
- **UtcTime**  
Specifies the UTC time when this status was generated.

### 5.11.21 PTZPreset

```
<xs:complexType name="PTZPreset">
  <xs:sequence>
    <xs:element name="Name" type="tt:Name" minOccurs="0"/>
    <xs:element name="PTZPosition" type="tt:PTZVector" minOccurs="0"/>
  </xs:sequence>
  <xs:attribute name="token" type="tt:ReferenceToken"/>
</xs:complexType>
```

- **token**  
A unique identifier to reference the preset.
- **Name**  
A list of preset position name.
- **PTZPosition**  
A list of preset position.

### 5.11.22 PTZMoveStatus

```
<xs:complexType name="PTZMoveStatus">
  <xs:sequence>
    <xs:element name="PanTilt" type="tt:MoveStatus" minOccurs="0"/>
    <xs:element name="Zoom" type="tt:MoveStatus" minOccurs="0"/>
  </xs:sequence>
</xs:complexType>
```

- **PanTilt**  
Defined values are IDLE, MOVING and UNKNOWN.
- **Zoom**  
Defined values are IDLE, MOVING and UNKNOWN.

### 5.11.23 PresetTour

```
<xs:complexType name="PresetTour">
  <xs:sequence>
    <xs:element name="Name" type="tt:Name" minOccurs="0"/>
    <xs:element name="Status" type="tt:PTZPresetTourStatus"/>
    <xs:element name="AutoStart" type="xs:boolean"/>
    <xs:element name="StartingCondition"
      type="tt:PTZPresetTourStartingCondition"/>
    <xs:element name="TourSpot" type="tt:PTZPresetTourSpot" minOccurs="0"
      maxOccurs="unbounded"/>
  </xs:sequence>
  <xs:attribute name="token" type="tt:ReferenceToken"/>
</xs:complexType>
```

- **Name**  
Readable name of the preset tour.
- **Status**  
Read only parameters to indicate the status of the preset tour.
- **AutoStart**  
Auto Start flag of the preset tour. True allows the preset tour to be activated always.
- **StartingCondition**  
Parameters to specify the detail behavior of the preset tour.
- **TourSpot**  
A list of detail of touring spots including preset positions.
- **token**  
Unique identifier of this preset tour.

### 5.11.24 PTZPresetTourSpot

```
<xs:complexType name="PTZPresetTourSpot">
  <xs:sequence>
    <xs:element name="PresetDetail" type="tt:PTZPresetTourPresetDetail"/>
    <xs:element name="Speed" type="tt:PTZSpeed" minOccurs="0"/>
    <xs:element name="StayTime" type="xs:duration" minOccurs="0"/>
  </xs:sequence>
</xs:complexType>
```

- **PresetDetail**  
Detail definition of preset position of the tour spot.
- **Speed**  
Optional parameter to specify Pan/Tilt and Zoom speed on moving toward this tour spot.

- **StayTime**  
Optional parameter to specify time duration of staying on this tour spot.

### 5.11.25 PTZPresetTourPresetDetail

```
<xs:complexType name="PTZPresetTourPresetDetail">
  <xs:sequence>
    <xs:choice>
      <xs:element name="PresetToken" type="tt:ReferenceToken" />
      <xs:element name="Home" type="xs:boolean" />
      <xs:element name="PTZPosition" type="tt:PTZVector" />
    </xs:choice>
  </xs:sequence>
</xs:complexType>
```

- **PresetToken**  
Option to specify the preset position with Preset Token defined in advance.
- **Home**  
Option to specify the preset position with the home position of this PTZ Node. "False" to this parameter shall be treated as an invalid argument.
- **PTZPosition**  
Option to specify the preset position with vector of PTZ node directly.

### 5.11.26 PTZPresetTourStatus

```
<xs:complexType name="PTZPresetTourStatus">
  <xs:sequence>
    <xs:element name="State" type="tt:PTZPresetTourState" />
    <xs:element name="CurrentTourSpot" type="tt:PTZPresetTourSpot"
      minOccurs="0" />
  </xs:sequence>
</xs:complexType>
```

- **State**  
Indicates state of this preset tour by Idle/Touring/Paused.
- **CurrentTourSpot**  
Indicates a tour spot currently staying.

### 5.11.27 PTZPresetTourStartingCondition

```
<xs:complexType name="PTZPresetTourStartingCondition">
  <xs:sequence>
    <xs:element name="RecurringTime" type="xs:int" minOccurs="0" />
    <xs:element name="RecurringDuration" type="xs:duration"
      minOccurs="0" />
    <xs:element name="Direction" type="tt:PTZPresetTourDirection"
      minOccurs="0" />
  </xs:sequence>
</xs:complexType>
```

- **RecurringTime**  
Optional parameter to specify how many times the preset tour is recurred.
- **RecurringDuration**  
Optional parameter to specify how long time duration the preset tour is recurred.
- **Direction**  
Optional parameter to choose which direction the preset tour goes. Forward shall be chosen in case it is omitted.

### 5.11.28 PTZPresetTourOptions

```
<xs:complexType name="PTZPresetTourOptions">
  <xs:sequence>
    <xs:element name="AutoStart" type="xs:boolean" />
    <xs:element name="StartingCondition"
      type="tt:PTZPresetTourStartingConditionOptions" />
    <xs:element name="TourSpot" type="tt:PTZPresetTourSpotOptions" />
  </xs:sequence>
</xs:complexType>
```

- **AutoStart**  
Indicates whether or not the AutoStart is supported.
- **StartingCondition**  
Supported options for Preset Tour Starting Condition.
- **TourSpot**  
Supported options for Preset Tour Spot.

### 5.11.29 PTZPresetTourSpotOptions

```
<xs:complexType name="PTZPresetTourOptions">
  <xs:sequence>
    <xs:element name="PresetDetail"
      type="tt:PTZPresetTourPresetDetailOptions" />
    <xs:element name="StayTime" type="tt:DurationRange" />
  </xs:sequence>
</xs:complexType>
```

- **PresetDetail**  
Supported options for detail definition of preset position of the tour spot.
- **StayTime**  
Supported range of stay time for a tour spot.

### 5.11.30 PTZPresetTourPresetDetailOptions

```
<xs:complexType name="PTZPresetTourOptions">
  <xs:sequence>
    <xs:element name="PresetToken" type="tt:ReferenceToken" minOccurs="0"
      maxOccurs="unbounded" />
    <xs:element name="Home" type="xs:boolean" minOccurs="0" />
```

```

<xs:element name="PanTiltPositionSpace" type="tt:Space2DDescription"
    minOccurs="0" />
<xs:element name="ZoomPositionSpace" type="tt:Space1DDescription"
    minOccurs="0" />
</xs:sequence>
</xs:complexType>

```

- **PresetToken**  
A list of available Preset Tokens for tour spots.
- **Home**  
An option to indicate Home position for tour spots.
- **PanTiltPositionSpace**  
Supported range of Pan and Tilt for tour spots.
- **ZoomPositionSpace**  
Supported range of Zoom for a tour spot.

### 5.11.31 PTZPresetTourStartingConditionOptions

```

<xs:complexType name="PTZPresetTourOptions">
    <xs:sequence>
        <xs:element name="RecurringTime" type="tt:IntRange" minOccurs="0" />
        <xs:element name="RecurringDuration" type="tt:DurationRange"
            minOccurs="0" />
        <xs:element name="Direction" type="tt:PTZPresetTourDirection"
            minOccurs="0" maxOccurs="unbounded" />
    </xs:sequence>
</xs:complexType>

```

- **RecurringTime**  
Supported range of Recurring Time.
- **RecurringDuration**  
Supported range of Recurring Duration.
- **Direction**  
Supported options for Direction of Preset Tour.

## 5.12 Events

A device supporting PTZ service dispatches events listed in this chapter through the event service.

### 5.12.1 PTZ Presets

A device supporting PTZ service specifies handling of PTZ presets. Since the move operations are non-blocking, a client is not informed when the PTZ preset has been reached. Therefore, a device supporting PTZ service should support the following events are introduced which inform subscribers about the status of preset movements.

Topic:

tns1:PTZController/PTZPresets/Invoked  
 tns1:PTZController/PTZPresets/Reached  
 tns1:PTZController/PTZPresets/Aborted

Topic: tns1:PTZController/PTZPresets/Left

The typical sequence of events is that first a client requests a certain preset. When the device accepts this request, it will send out an invoked event. The invoked event has to follow either a reached event or an aborted event. The former is used when the PTZ unit was able to reach the invoked preset position, the latter in any other case. A reached event has to follow a left event, as soon as the PTZ unit moves away from the preset position.

The message structure of these events is given by the following message description:

```
<tt:MessageDescription>
  <tt:Source>
    <tt:SimpleItemDescription Name="PTZConfigurationToken"
      Type="tt:ReferenceToken"/>
  </tt:Source>
  <tt:Data>
    <tt:SimpleItemDescription Name="PresetToken" Type="tt:ReferenceToken"/>
    <tt:SimpleItemDescription Name="PresetName" Type="tt:Name"/>
  </tt:Data>
</tt:MessageDescription>
```

### 5.12.2 PresetTours

When a PTZ node in a device supporting PTZ service indicates support of Preset Tour with MaximumNumberOfPresetTours>0 capability value, the device shall support the following topic to inform subscribers about preset tour events. Whenever a change in Preset Tours occurs, the PTZ service shall dispatch this event.

Topic: tns1:PTZController/PTZPresetTours/Configuration

```
<tt:MessageDescription isProperty=True>
  <tt:Source>
    <tt:SimpleItem Name="ProfileToken" Type="tt:ReferenceToken"/>
    <tt:SimpleItem Name="PresetTourToken" Type="tt:ReferenceToken"/>
  </tt:Source>
  <tt:Data>
    <tt:SimpleItem Name="StateChange" Type="xs:boolean"/>
    <tt:ElementItem Name="PresetTour" Type="tt:PTZPresetTour"/>
  </tt:Data>
</tt:MessageDescription>
```

StateChange flag in the Data part becomes true when the mentioned Preset Tour includes any changes of its State.

### 5.13 Service specific fault codes

Table 29 below lists the PTZ service specific fault codes. Each command can generate a generic fault.

The specific faults are defined as subcode of a generic fault, as defined in the ONVIF Core Specification. The parent generic sub code is the *subcode* at the top of each row below and the specific fault *subcode* is at the bottom of the cell.

**Table 29: PTZ specific fault codes**

<b>Fault Code</b>	<b>Parent Subcode</b>	<b>Fault Reason</b>	<b>Description</b>
	<b>Subcode</b>		
env:Receiver	ter:Action	Preset cannot be set	Preset cannot be set while the PTZ unit is moving.
	Ter:MovingPTZ		
env:Receiver	ter:Action	Number of presets limit reached	Maximum number of Presets reached.
	Ter:TooManyPresets		
env:Receiver	ter:ActionNotSupported	PTZ not supported	PTZ is not supported by the device.
	Ter:PTZNotSupported		
env:Sender	ter:InvalidArgVal	Token already exist	The requested name or token already exist for another preset.
	ter:PresetExist		
env:Receiver	ter:Action	No PTZ status available	No PTZ status is available in the requested Media Profile.
	ter>NoStatus		
env:Receiver	ter:Action	Conflict when using new settings	The new settings result in an inconsistent configuration.
	ter:ConfigurationConflict		
env:Receiver	ter:Action	Home position cannot be overwritten	The home position is fixed and cannot be overwritten.
	ter:CannotOverwriteHome		
env:Sender	ter:InvalidArgVal	No PTZ Configuration	The requested profile does not reference a PTZ configuration.
	ter:NoPTZConfiguration		
env:Sender	ter:InvalidArgVal	No such PTZ node	No such PTZ Node on the device
	ter:NoEntity		
env:Sender	ter:InvalidArgVal	No such configuration	No such configuration exist.
	ter:NoConfig		
env:Sender	ter:InvalidArgVal	The paramters could not be set	The configuration parameters are not possible to set.
	ter:ConfigModify		
env:Sender	ter:InvalidArgVal	Destination out of	The requested destination is out of bounds.

	ter:InvalidPosition	bounds	
env:Sender	ter:InvalidArgVal	Translation out of bounds	The requested translation is out of bounds.
	ter:InvalidTranslation		
env:Sender	ter:InvalidArgVal	Requested speed out of bounds	The requested speed is out of bounds.
	ter:InvalidSpeed		
env:Sender	ter:InvalidArgVal	Velocity out of bounds	The requested velocity is out of bounds.
	ter:InvalidVelocity		
env:Sender	ter:InvalidArgVal	PresetName too long	The PresetName is either too long or contains invalid characters.
	ter:InvalidPresetName		
env:Sender	ter:InvalidArgVal	Profile miss PTZ configuration	The requested profile token does not reference a PTZ configuration.
	ter:NoPTZProfile		
env:Sender	ter:InvalidArgVal	Profile token does not exist	The requested profile token <b>ProfileToken</b> does not exist.
	ter:NoProfile		
env:Sender	ter:InvalidArgVal	Timeout not supported	The specified timeout argument is not within the supported timeout range.
	ter:TimeoutNotSupported		
env:Sender	ter:InvalidArgVal	Token does not exist.	The requested preset token does not exist
	ter:NoToken		
env:Receiver	ter:Action	No HomePosition	No home position has been defined for this Profile.
	ter:NoHomePosition		
env:Sender	ter:InvalidArgVal	No such space	A space is referenced in an argument which is not supported by the PTZ Node.
	ter:SpaceNotSupported		
env:Sender	ter:InvalidArgVal	Invalid PresetTour	The requested PresetTour includes invalid parameter(s)
	ter:InvalidPresetTour		
env:Receiver	ter:ActionNotSupported	Optional action not supported	Optional command is not supported or not implemented by the device.
	Ter:OptionalActionNotSupported		

**Annex A. Revision History**

Rev.	Date	Editor	Changes
2.1	Jul-2011	Hans Busch	Split from Core 2.0 without change of content.
2.1.1	Jan-2012	Hans Busch	Change Requests 262, 434, 535, 554
2.2	May-2012	Takahiro Iwasaki	Addition of Preset Tour and PT Control Direction features Change Request 648
2.2.1	Sep-2012	Hans Busch	Change Request 708, 825
2.4	Mar-2013	Daniel Fiala	Change Request 871
2.4.1	Dec-2013	Michio Hirai	Change Request 1207, 1215
2.4.2	Jun-2014	Michio Hirai	Change Request 1360, 1361, 1362
2.5	Dec-2014	Ottavio Campana, Michio Hirai	Addition of Ramp feature Change Request 1322
2.6	Jun-2015	Michio Hirai	Change Request 1660, 1668
2.6.1	Dec-2015	Hiroyuki Sano	Change Request 1700