


Drill holes on the wall to install expansion bolts

Use an electric drill to drill a hole with the same diameter as the expansion bolt on the wall, and insert the expansion bolt into the hole.

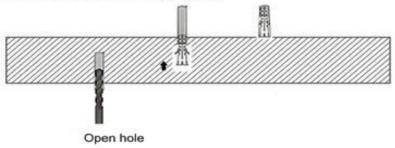

Fix the base of ropes onto wall or ceiling